

For your safety



These instructions will help you properly, safely and beneficially operate the product.

Anyone who assembles, operates or otherwise uses this product must have read and understood the full contents of these assembly and usage instructions.

Always keep these assembly and usage instructions within your reach or in close proximity to the product for the entire duration of its usage so that you can quickly look up any missing information.

Intended use

This product is intended exclusively for private use by adults in their homes, as a living room chair.

The products can be adjusted by means of a motor drive, if included. The prescribed position of the user is lying or sitting. The maximum user body weight is 130 kg.

The product is only designed for the intended purpose defined. If you use the product for another purpose, there is the risk that individual components may be overloaded. This may then overload the product and cause damage. You therefore risk causing serious personal injury from overloaded components and consequential damage.

In this case, you would be operating the product in a state for which the product was not designed.

If you want to use the product for other purposes, you must first obtain a written release declaration from the manufacturer.

Risk of injury

The product may only be used by children aged 14 years and over, persons with reduced physical, sensory or mental capabilities or those who lack experience and knowledge, when supervised or if they have been instructed in the safe use of the equipment and understand the resulting risks.

Do not allow children to play with the product.

Do not allow children to perform cleaning or maintenance tasks without supervision. People who suffer from physical limitations may only use the product under supervision. Provide aid to these people when they are using the seat chassis.

Never use the product or parts of the product near high-frequency surgical equipment and defibrillators. Disconnect the product from the power connection before performing any maintenance.

Never clean the product with a pressure washer. You risk potential injury from electrical shocks if the electrical equipment is installed.

Do not modify the product and only use it for the intended purposes in accordance with the section "Intended use".

Other intended purposes are only permissible with written permission from the manufacturer. The manufacturer does not assume liability for damages which result from disregarding this provision.

Do not store items on the product. They may fall off. Do not use or assemble the product before reading and understanding all instructions.

In the event of malfunction, take the product out of operation and secure it against unintended further use. Servicing tasks may only be carried out by authorized persons who have been trained for this task.

Tie long hair back during assembly work and do not wear loose clothes or loose jewelry that may get caught in the moving parts of the product.

Risk of suffocation

Do not let children play with packaging film, plastic bags or other product accessories. Children may suffocate. Do not allow children near the product unsupervised.

Risk of poisoning

Children may swallow small parts such as batteries or screws. Store the accessory parts of the product somewhere that cannot be accessed by children.

Risk of damage to property

To prevent damage to property, you must follow the following safety notices:

Only allow qualified expert personnel to carry out repairs. In doing so, incorrect repairs will then be avoided. Only use the accessories and replacement parts recommended by Ekornes AS. This will prevent the malfunctioning of the product and the promised performance will be achieved.

Only use the corresponding recommended tool for work carried out on the product. Otherwise you may damage parts of the product.

Do not drop parts of the product on the floor or on hard surfaces or objects. This could cause damage to these parts.

Protect the electrical and electronic components of the product from any water or other liquids to prevent damage Risks from climatic influences

To prevent damage or risks caused by climatic influences, please adhere to the following conditions:

Do not use the product in corrosive atmospheres (chlorine, ammonia, lime water, or acidic and other aggressive atmospheres).

Only use the product in rooms or areas in which the humidity is less than 100%.

Do not use the product in rooms with a high level of dust formation.

Do not use the product near sources of heat.

Do not use the product in explosive environments.

Switch components built into the product may cause sparks to form. Explosions may be triggered by these sparks in explosive environments.

Only expose the product to the permissible temperatures between +5°C and +35°C.

Waste management

The product consists of the following disposable materials: Steel, plastic, wood, textiles and/or leather
Diverse plastics, e.g., installation material, insulation material

Rubber parts, e.g., seals and base

Electrical cables, electrical lines, electrical appliances such as motors, electronic components, electrical controls, installation materials, if present.

For the European Union and EEA (Norway, Iceland and Liechtenstein)

This symbol (waste bin) indicates that the electrical and electronic components of the product is not to be disposed with your household waste, according to the WEEE Directive (2012/19/EU) and/or national legislation implementing those Directives.

This product should be handed over to a designated collection point or an authorized collection site for recycling waste electrical and electronic equipment.

Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with electrical and electronic equipment.

