



Assembly and use



Stressless® Mike & Max

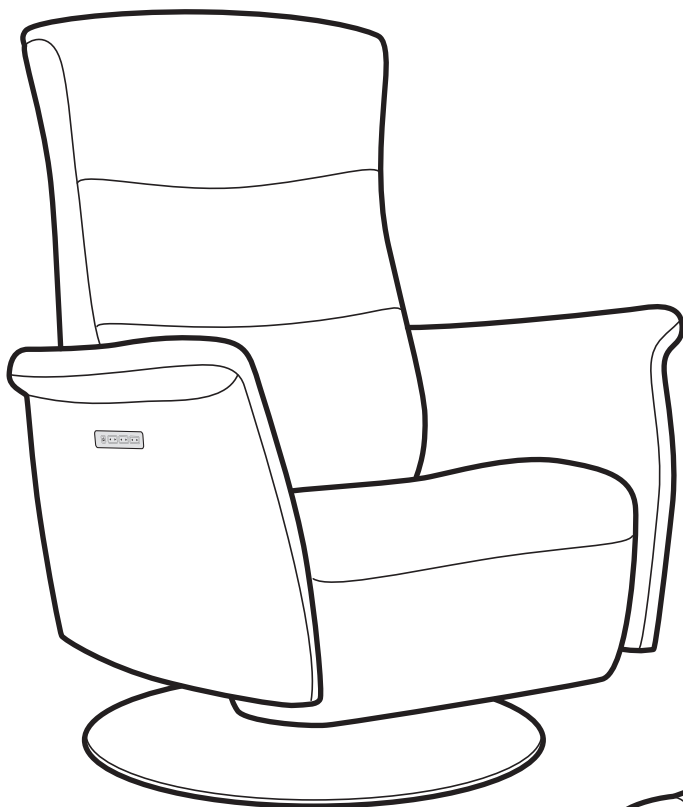


The guide for assembly and use must be carefully read before using the chair.
Keep the guide for future reference!

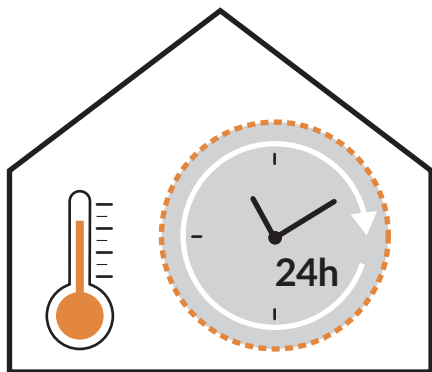


Acclimates indoors for 24
hours before use!








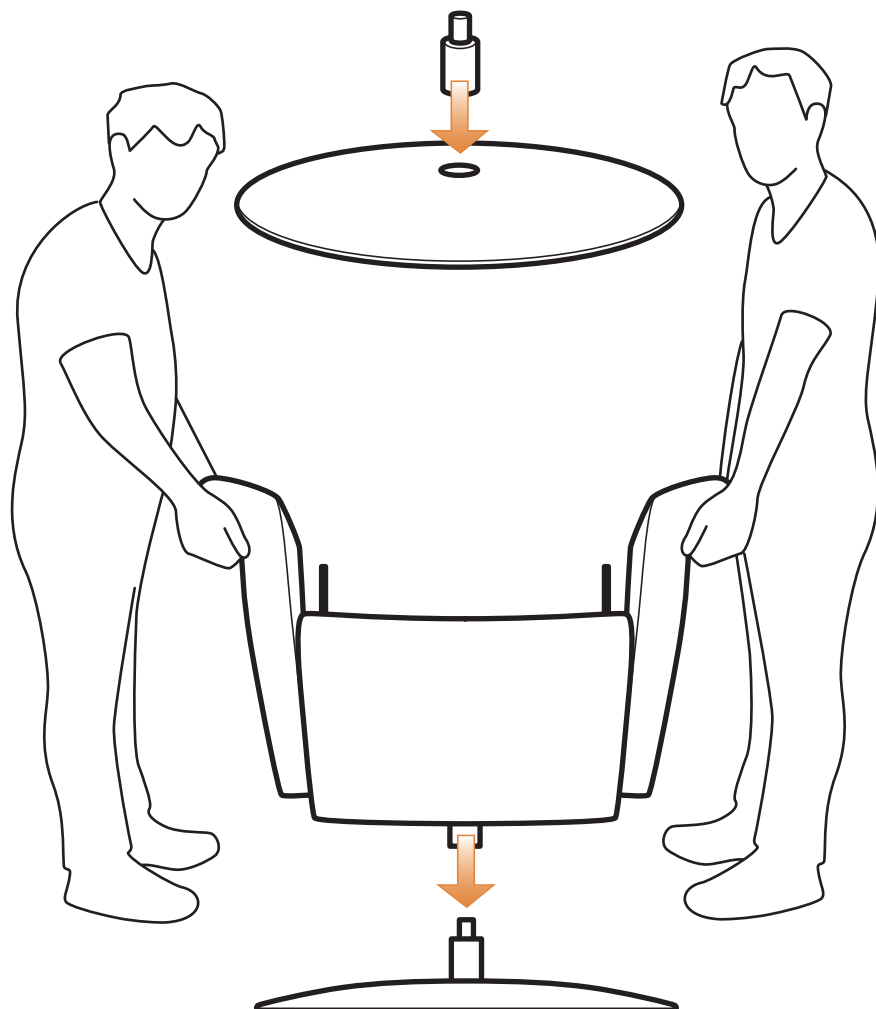
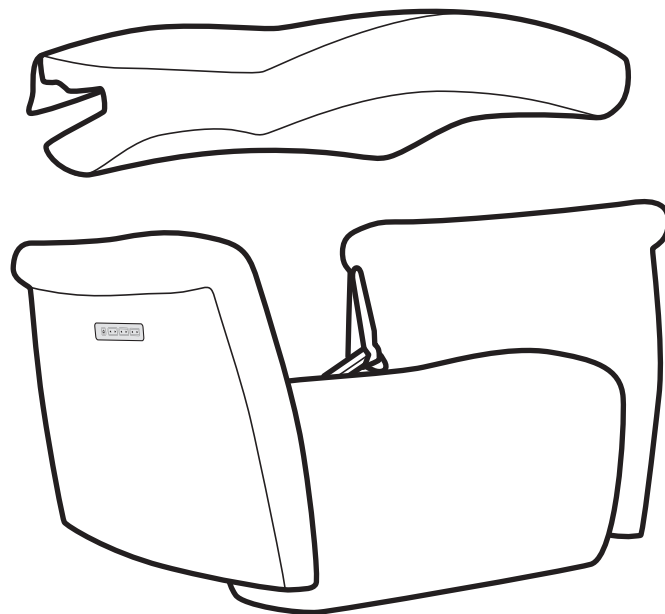






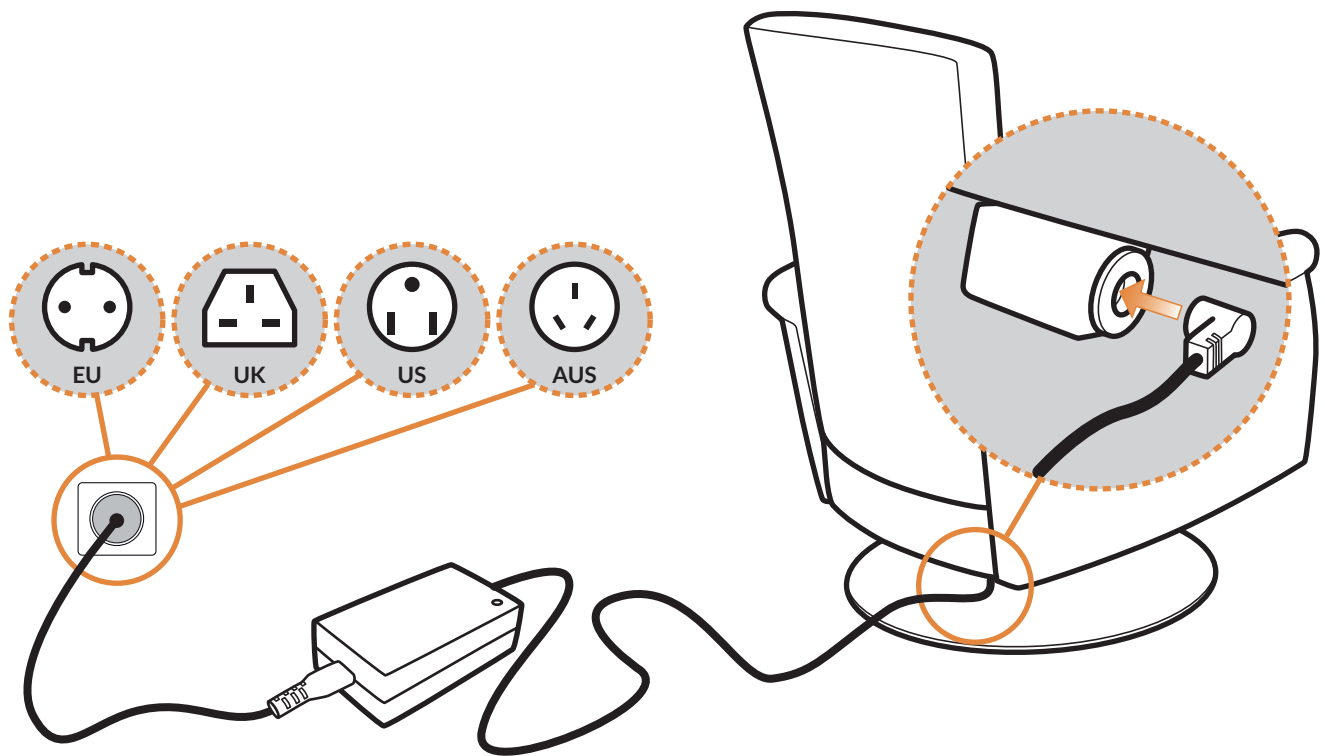


Battery charging


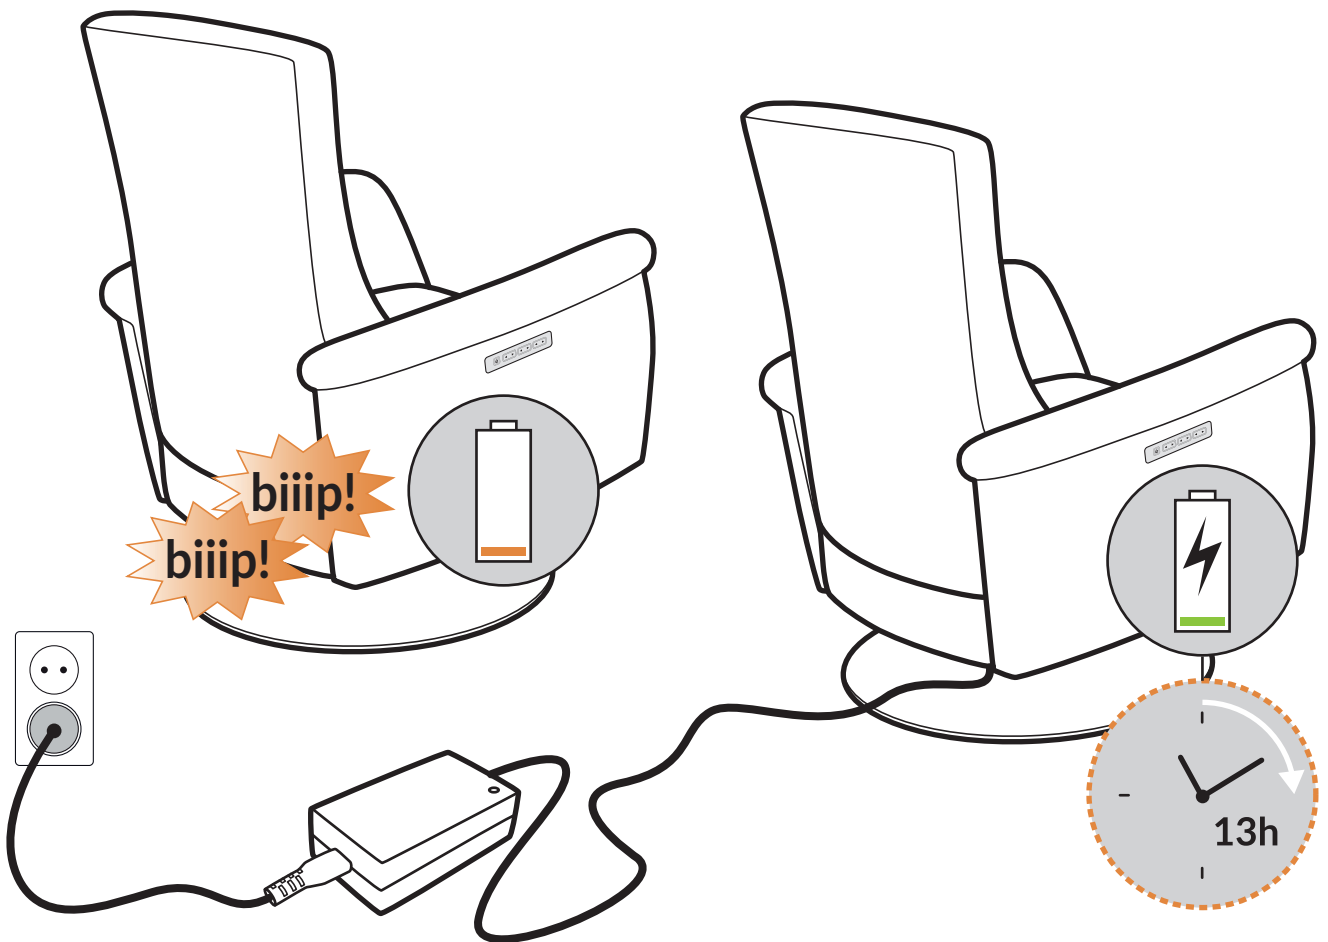


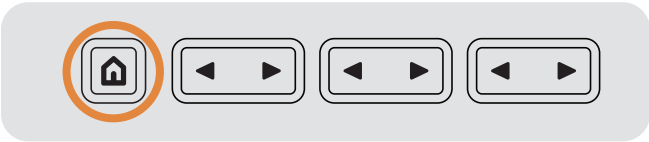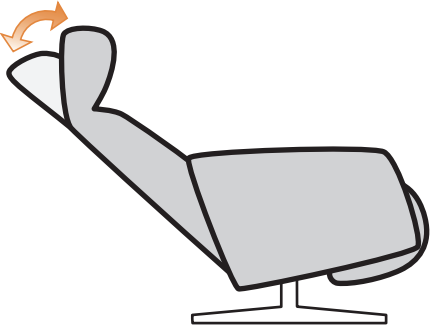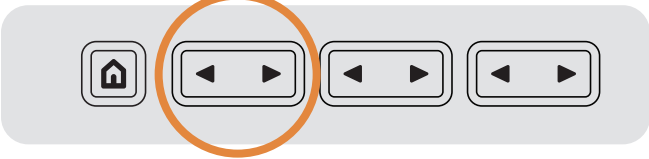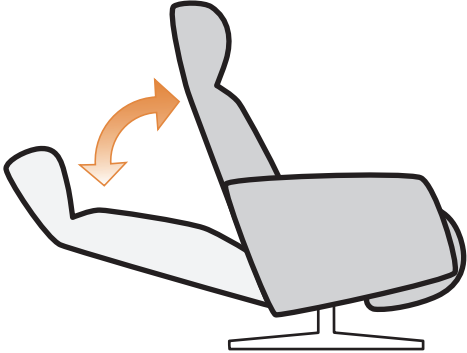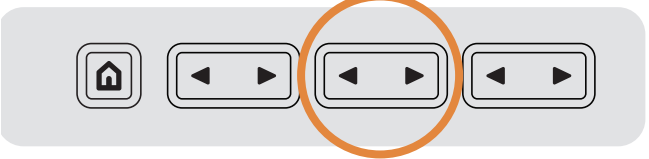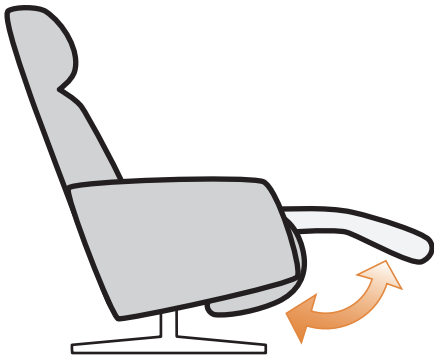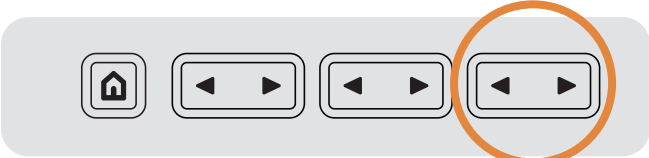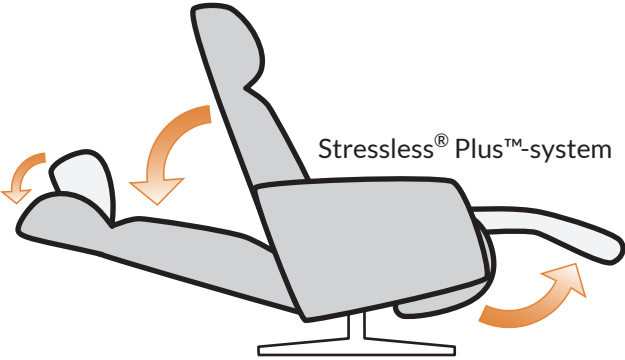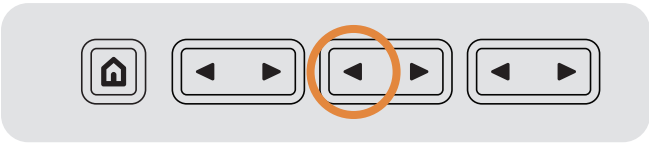





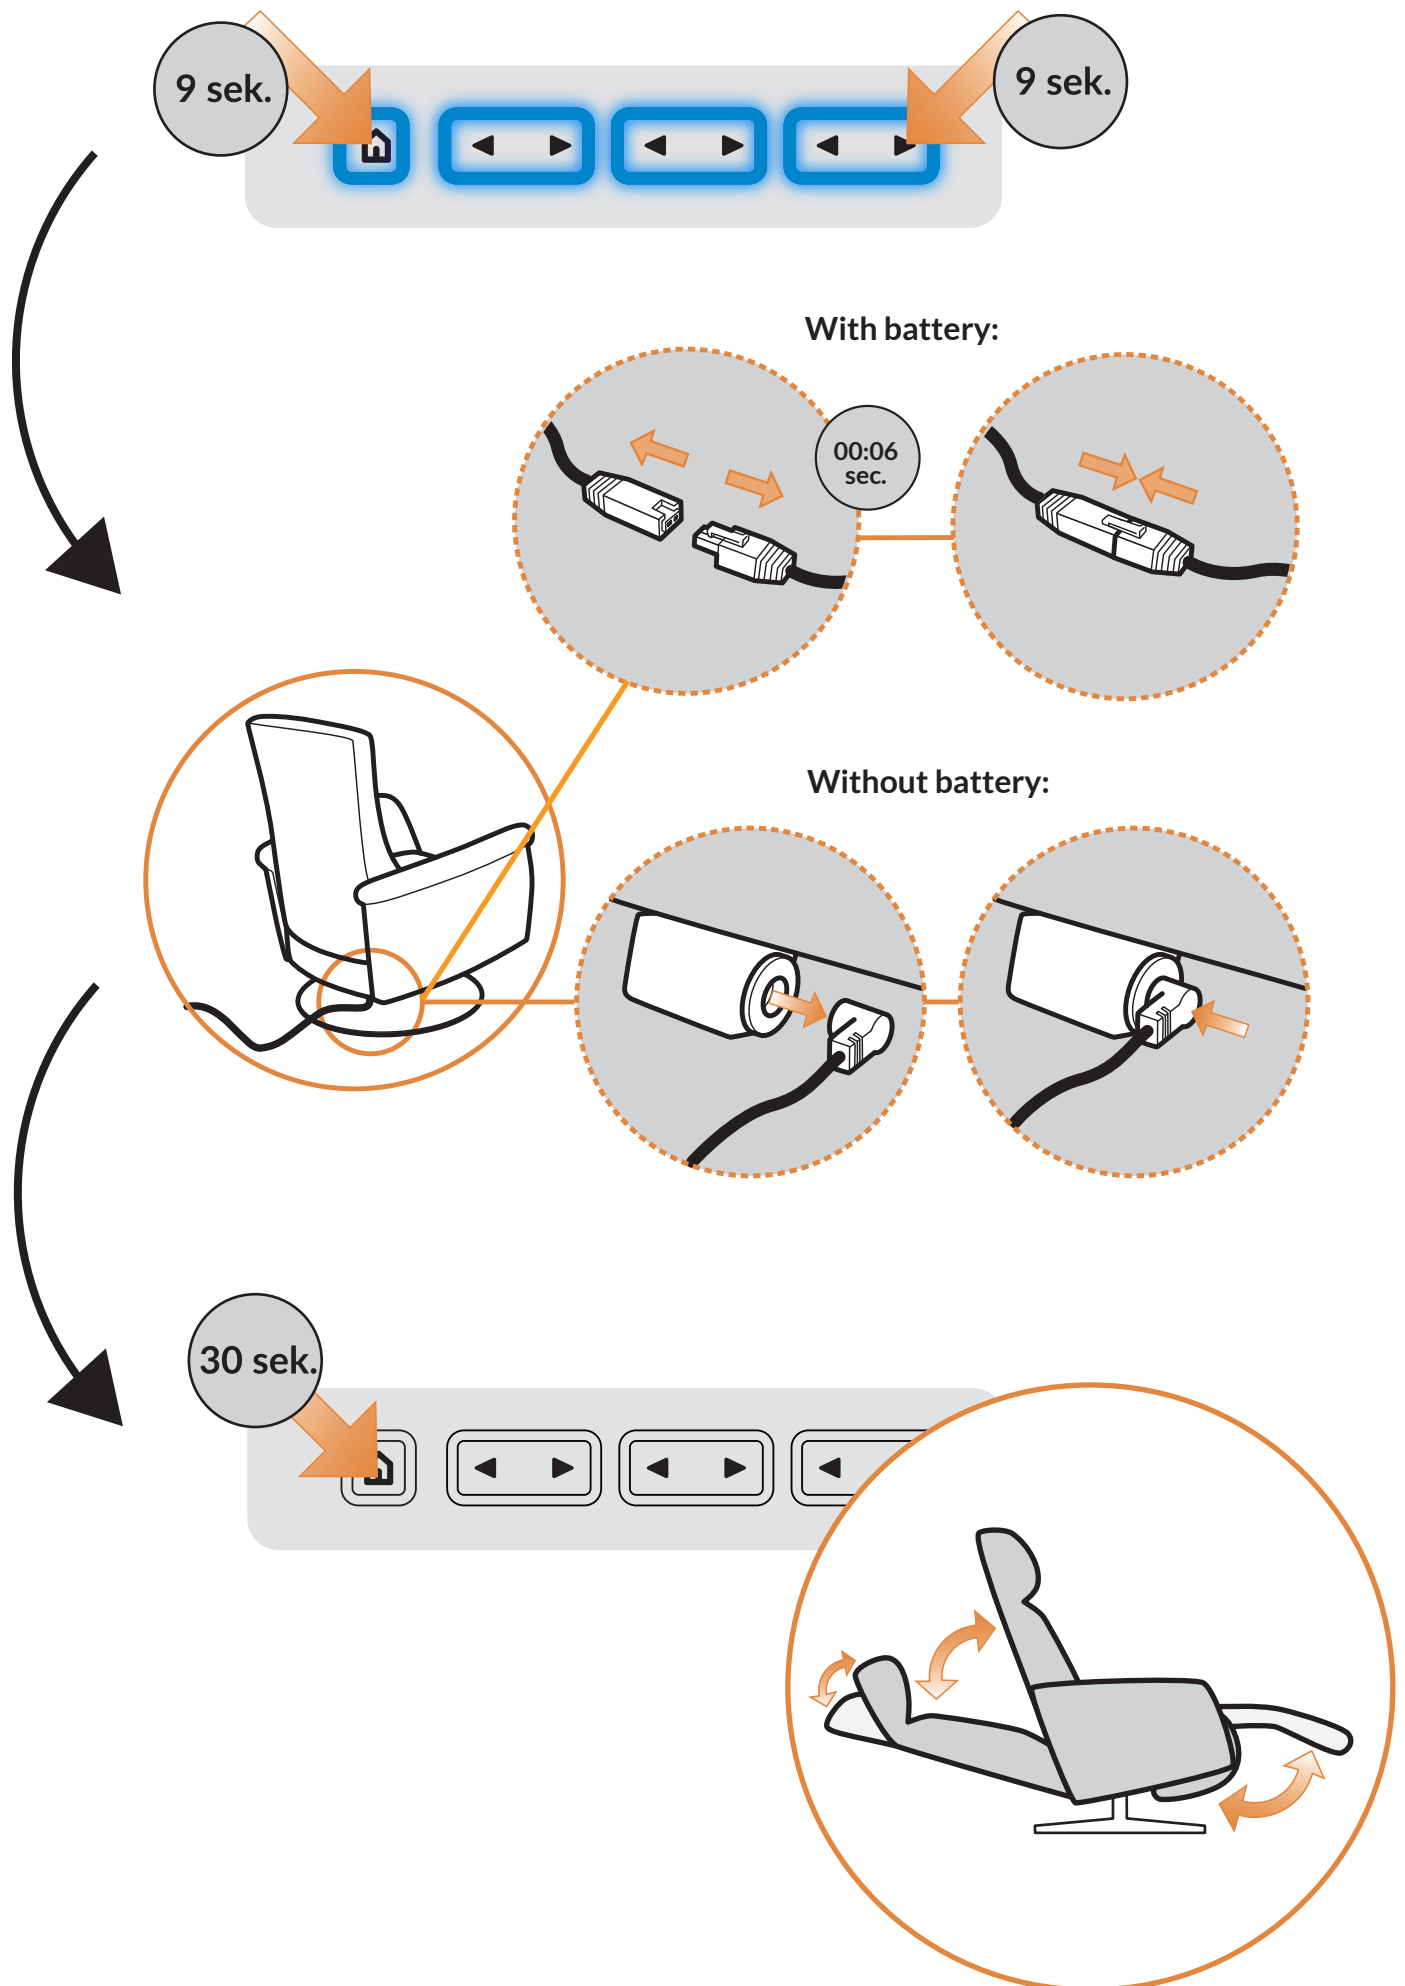


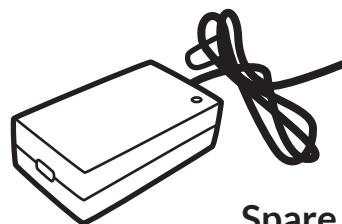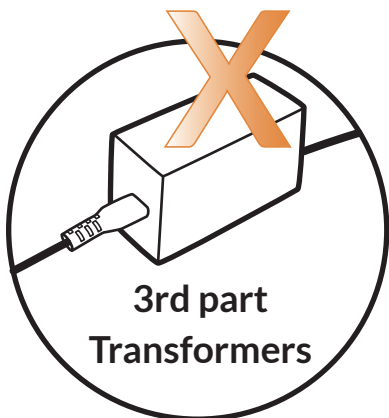

Spare part:
1997433

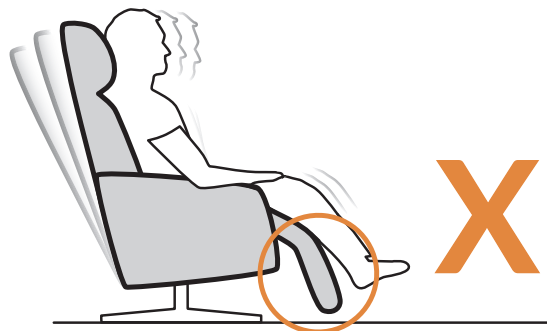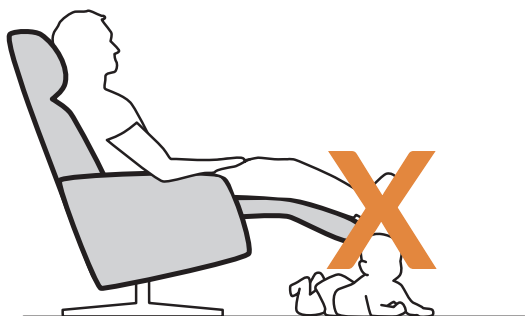

Do not rock the recliner with the leg rest out

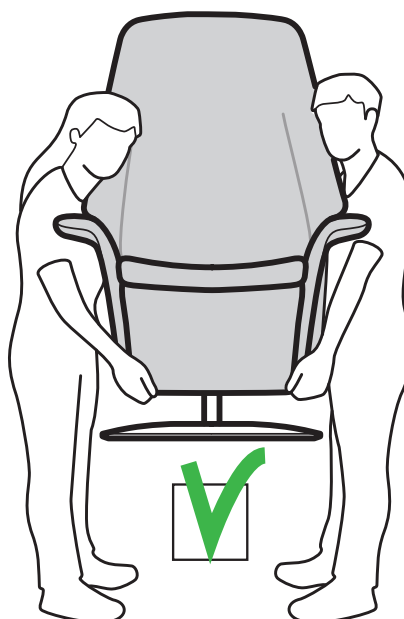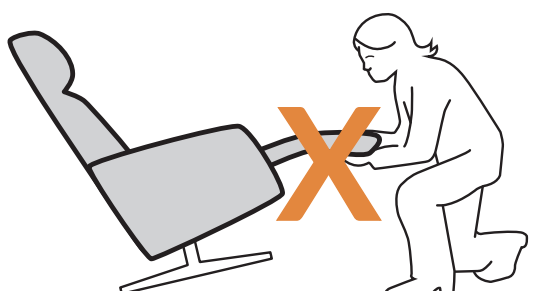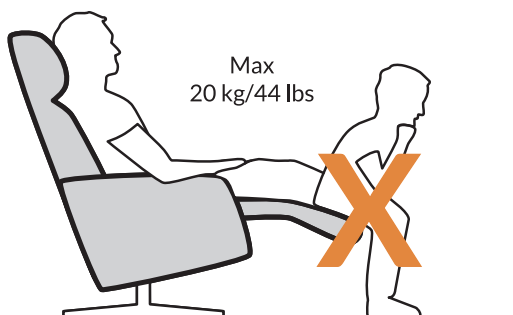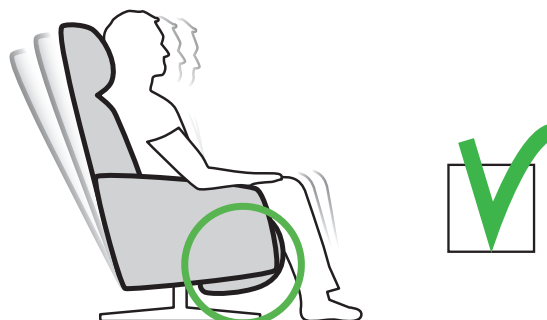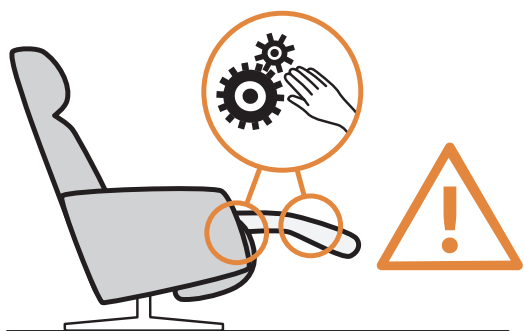



STRESSLESS.COM

Ekornes AS, Industrivegen 1, N-6222 Ikkornes
Tel.: (+47) 70 25 52 00
E-mail: office.no@ekornes.com