



Stressless®


Stressless® sofa
Assembly
instructions

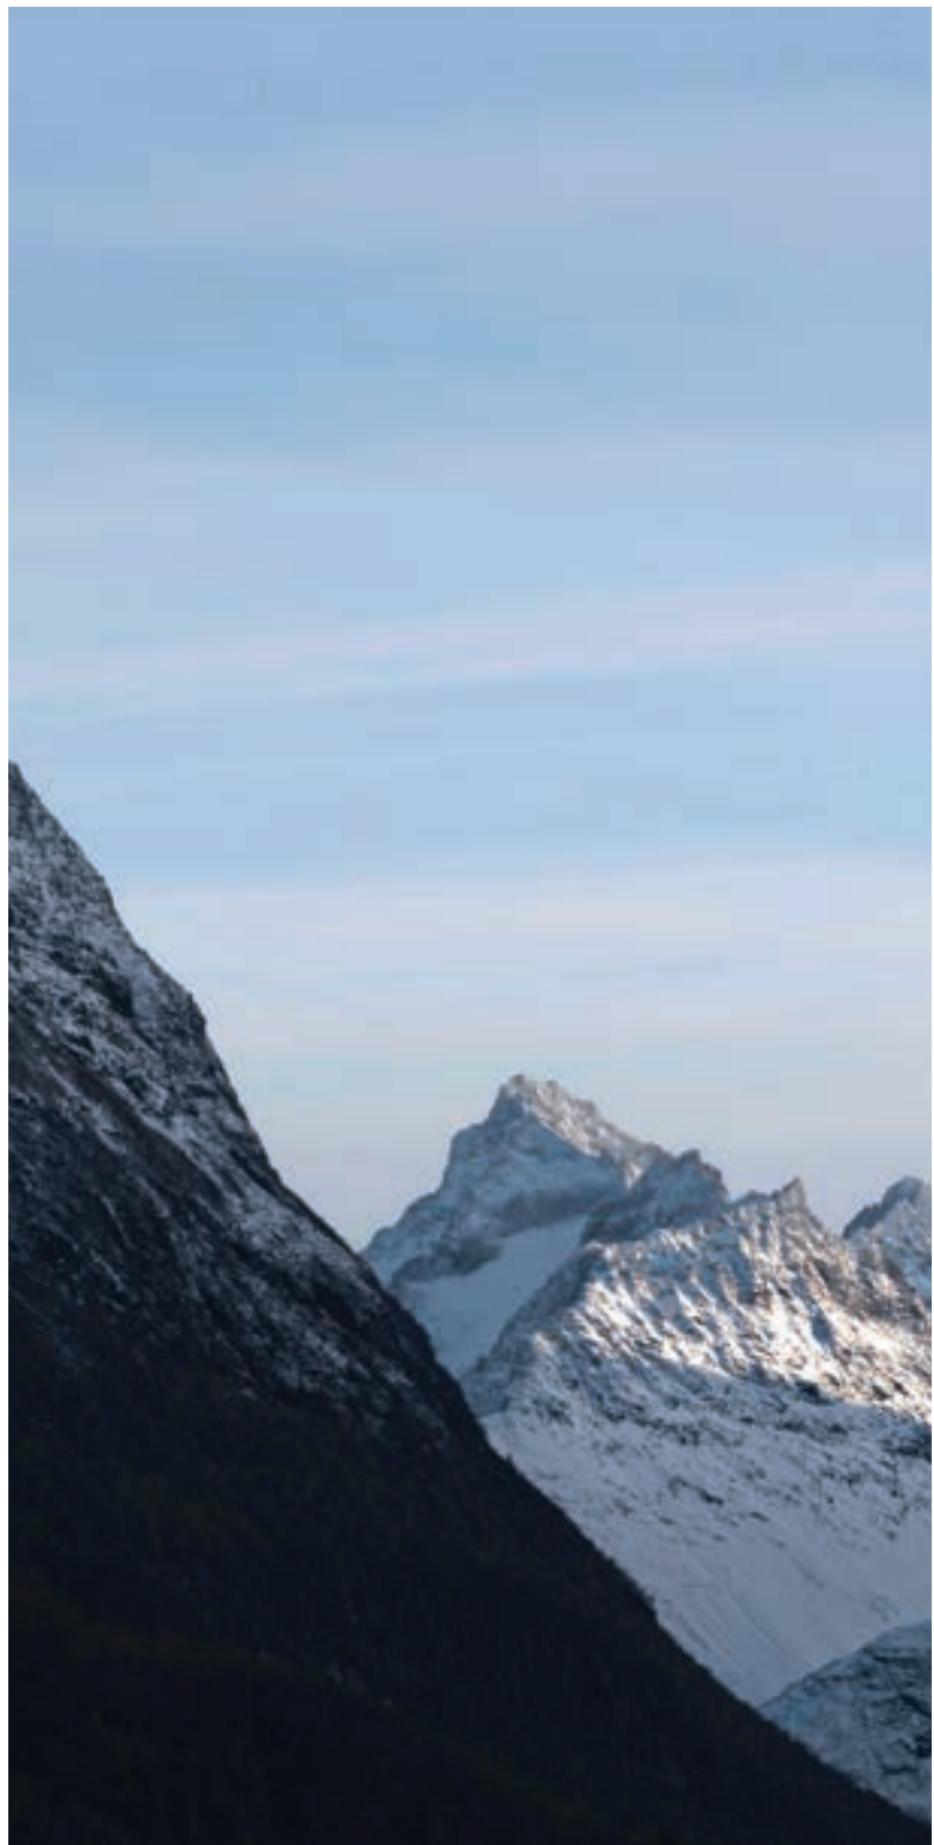



ASSEMBLY - ALTERNATIVE LEGS

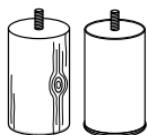

- 1** ROUND LEGS **2** SQUARE LEGS **3** CONED LEGS
p. 4 p. 5 p. 6-7
- 4** SQUARE LEGS
p. 8-10
-

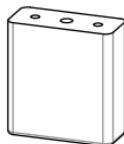


- 5** WOOD HOOP **6** STEEL HOOP
p. 11-12 p. 13
-

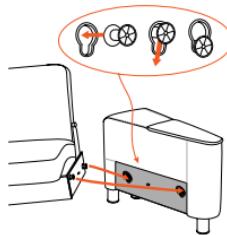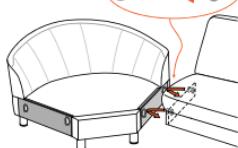


- 7** MEDIUM CORNER **8** SECTOR TO SOFA
p. 14-15 p. 16-17
-

DISASSEMBLY

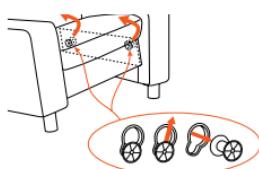


- 9** ARMREST
p. 18-19


1 ASSEMBLY - STEEL/WOODEN LEGS, ROUND

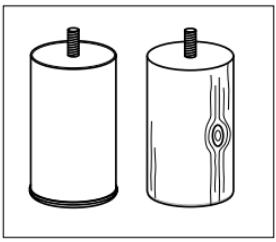

Sofa

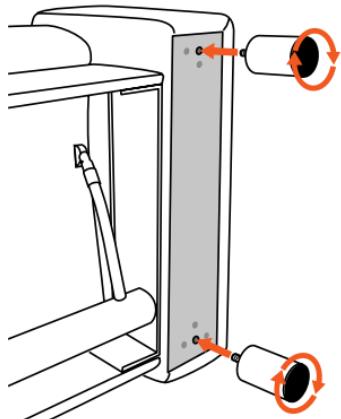


Medium corner


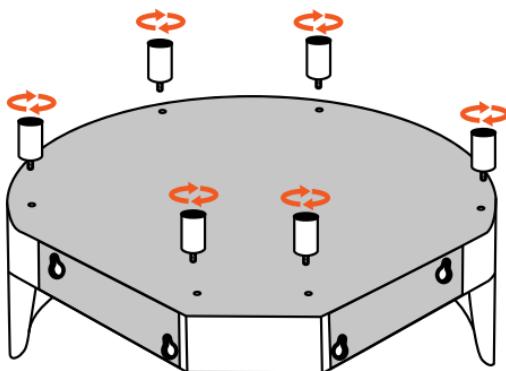


Sector




Sector Arm 11

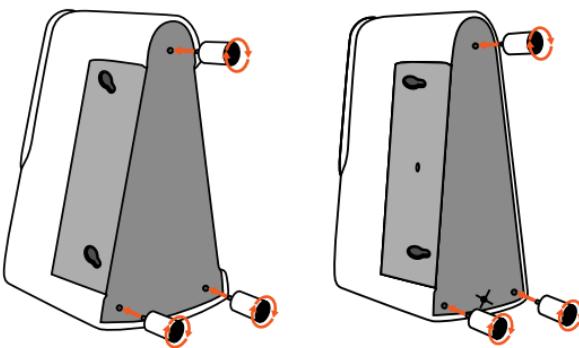




2 ASSEMBLY - WOODEN LEGS, SQUARE

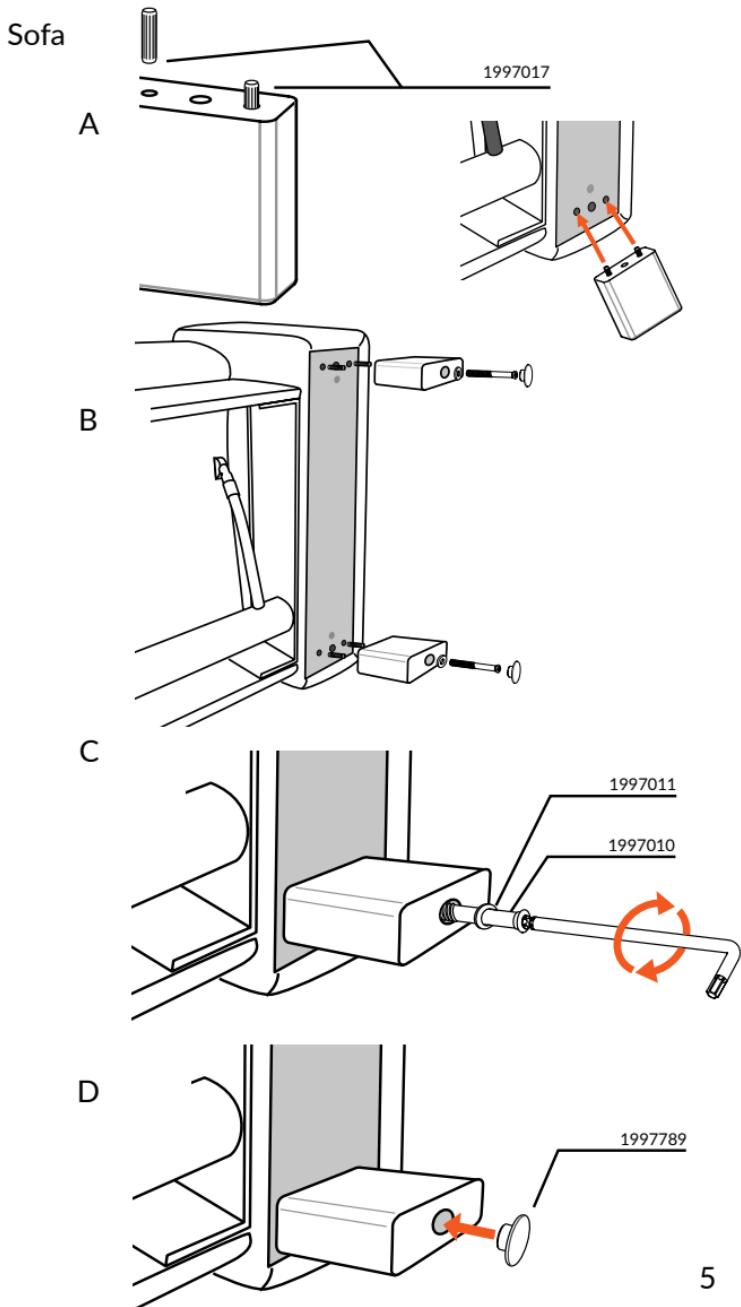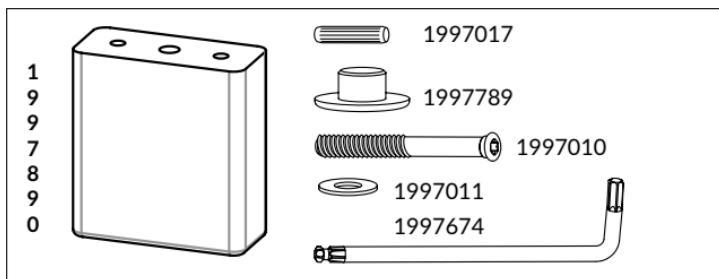


3 ASSEMBLY - CONED LEGS

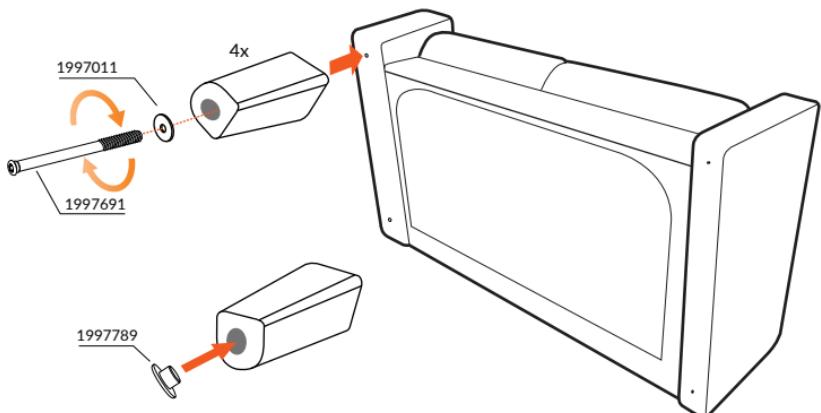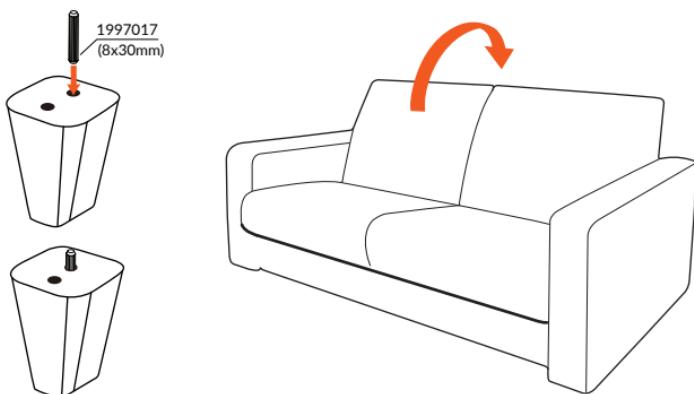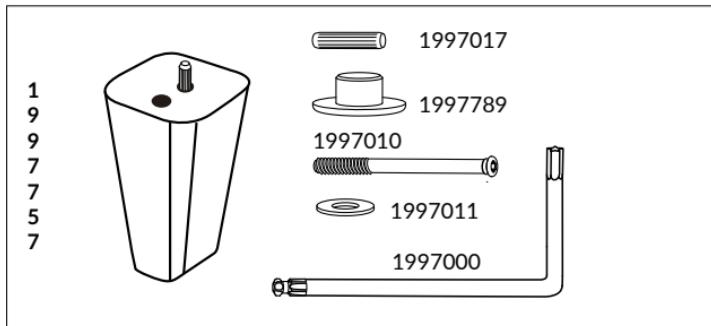



ASSEMBLY - CONED LEGS CORNER

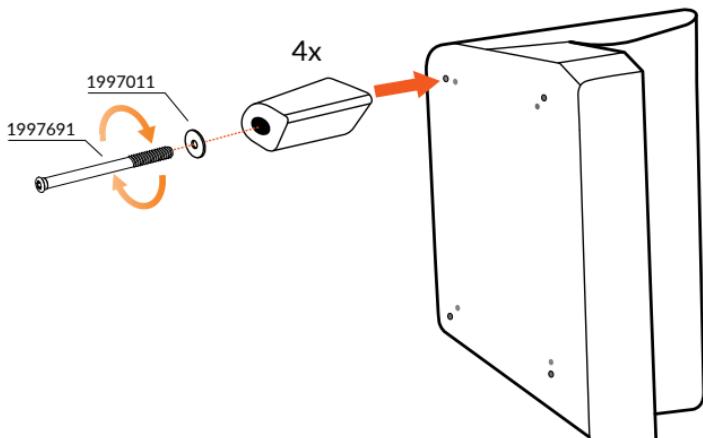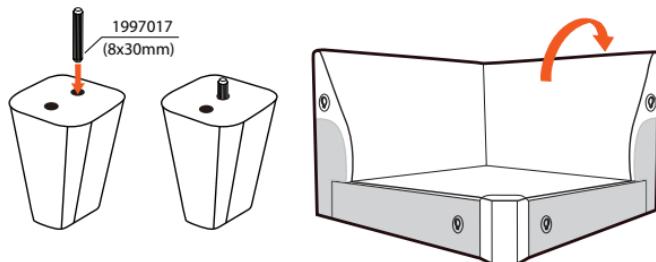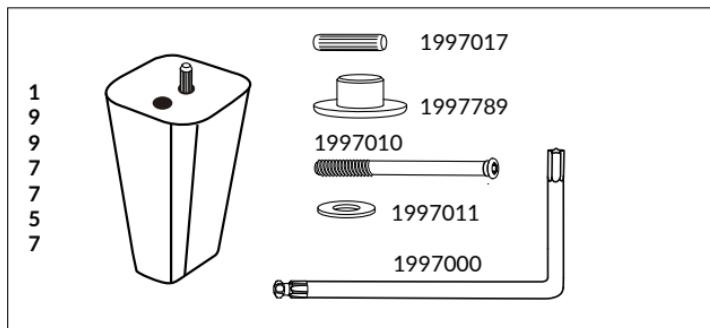


4 ASSEMBLY - WOODEN LEGS, SQUARE CORNER

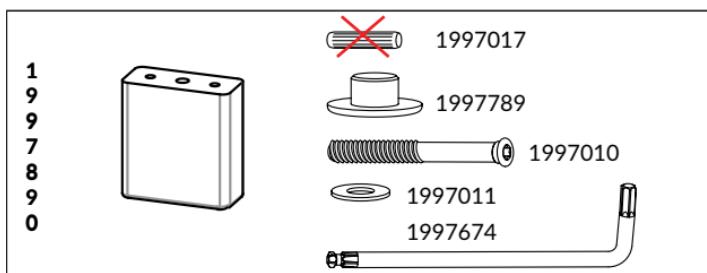



Assemble Medium Corner

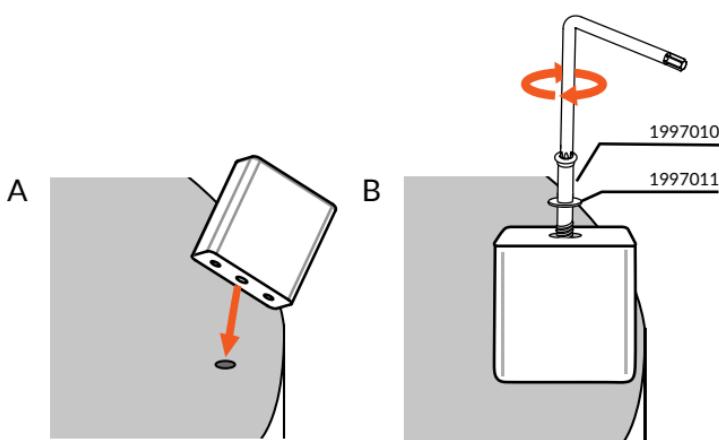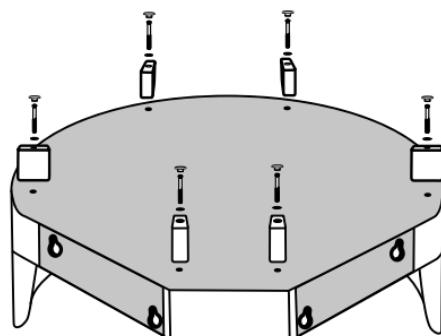


ASSEMBLY - WOODEN LEGS, SQUARE SECTOR

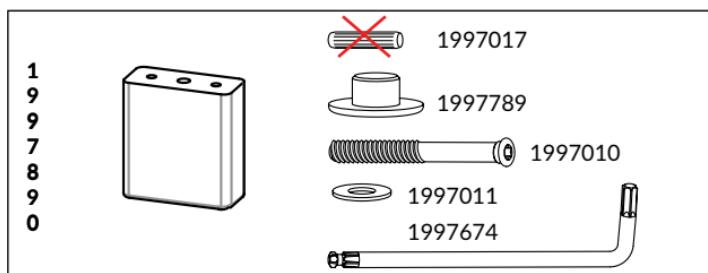


Assemble Sector

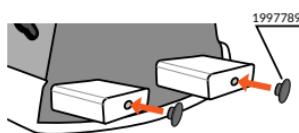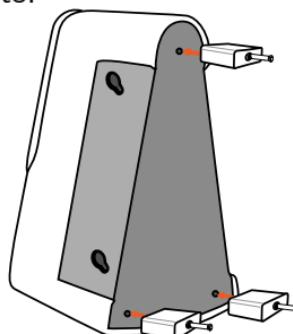


A

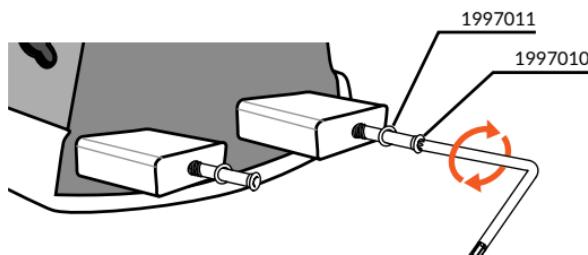




B

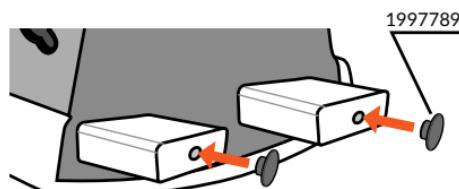


ASSEMBLY - WOODEN LEGS, SQUARE SECTOR ARM

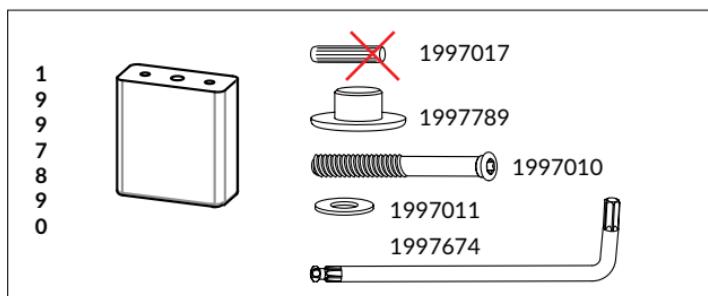


Assemble Sector Arm 11

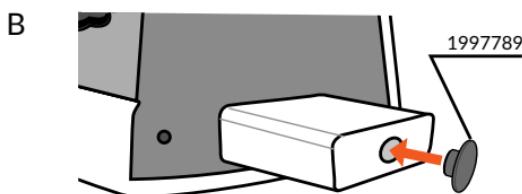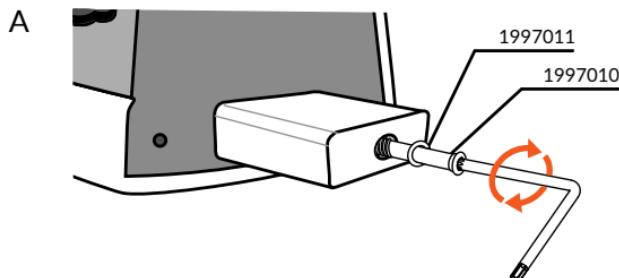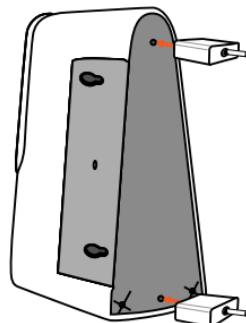


5 ASSEMBLY - WOODEN HOOP (laminated)

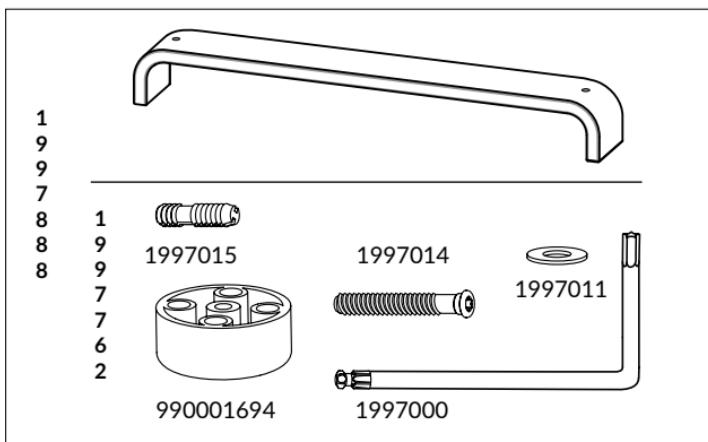




Sofa

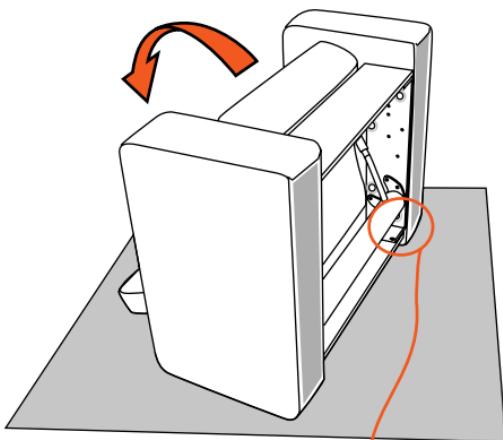



A

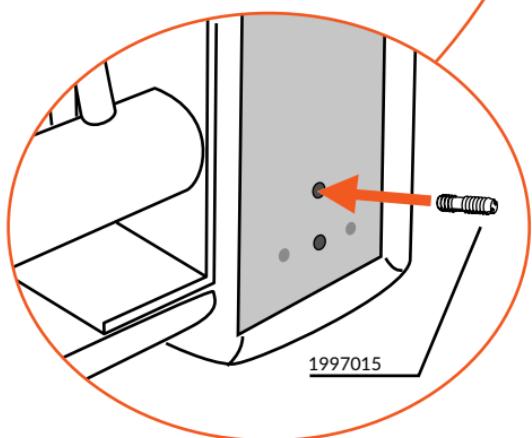

ASSEMBLY - WOODEN HOOP (laminated)

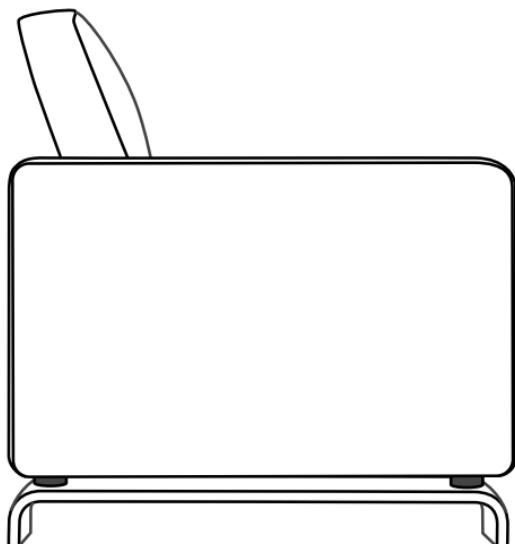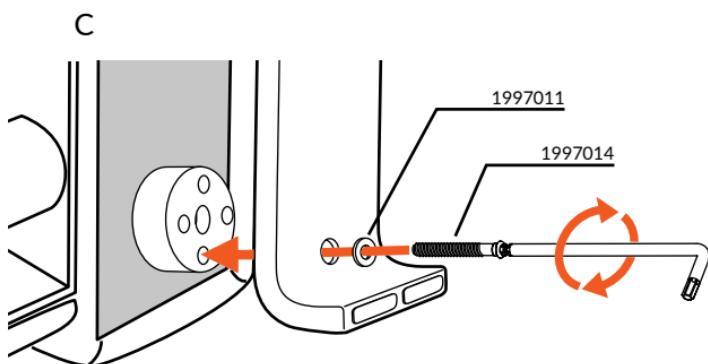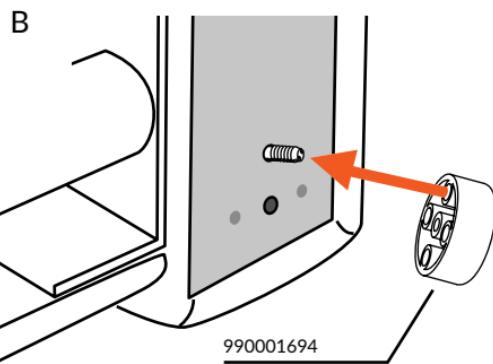


6 ASSEMBLY - STEEL HOOP - SOFA

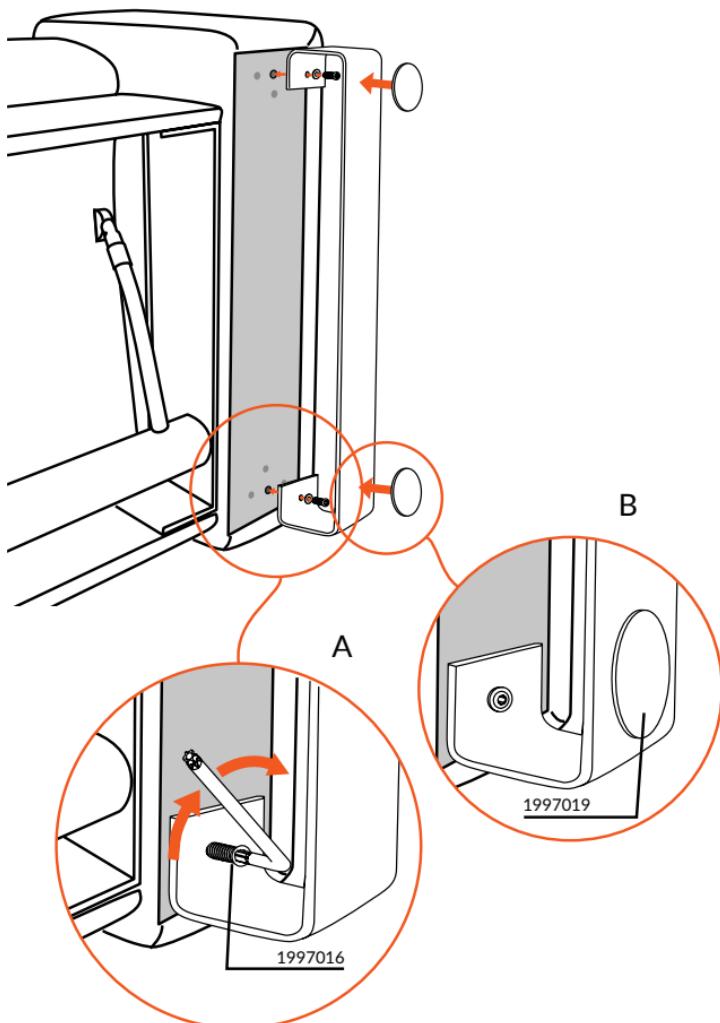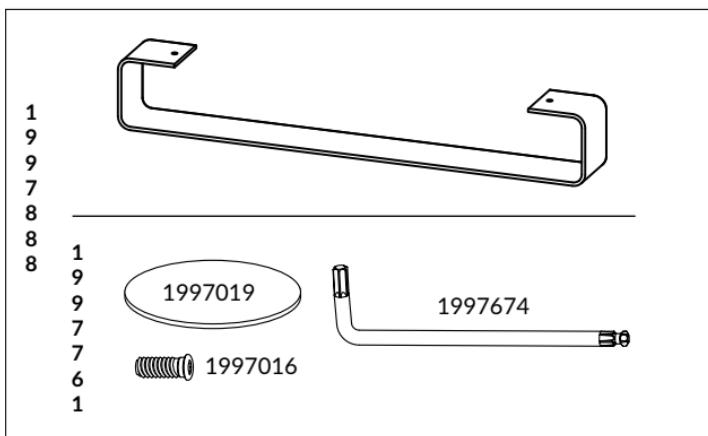


7 ASSEMBLY MEDIUM CORNER TO SOFA


A

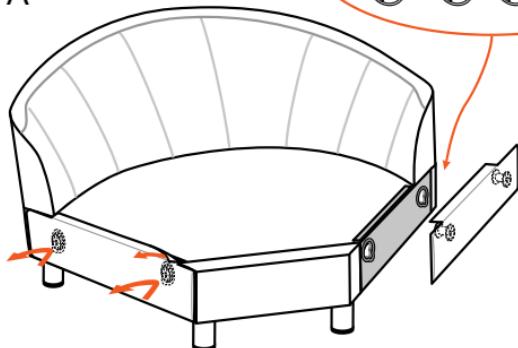

B

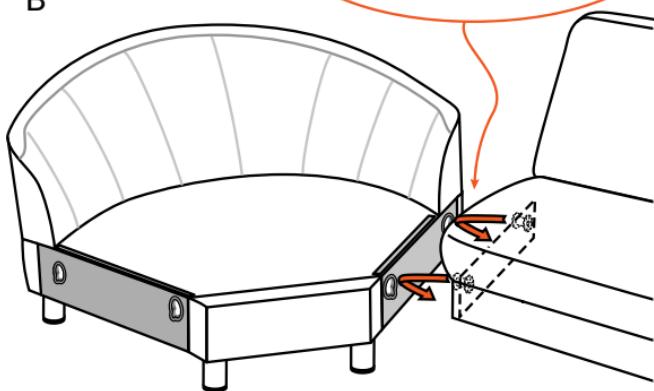



C

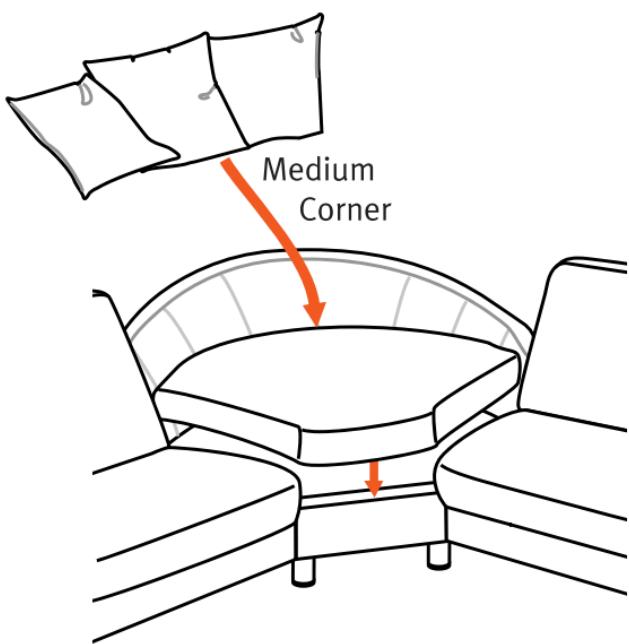

8 ASSEMBLY SECTOR TO SOFA


1
9
9
7
6
7
2

 1997721
1997674

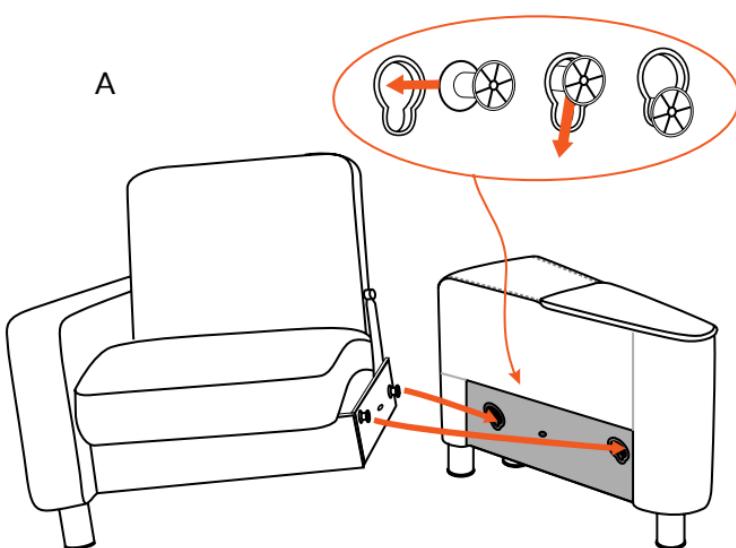


ASSEMBLY SECTOR TO SOFA

B

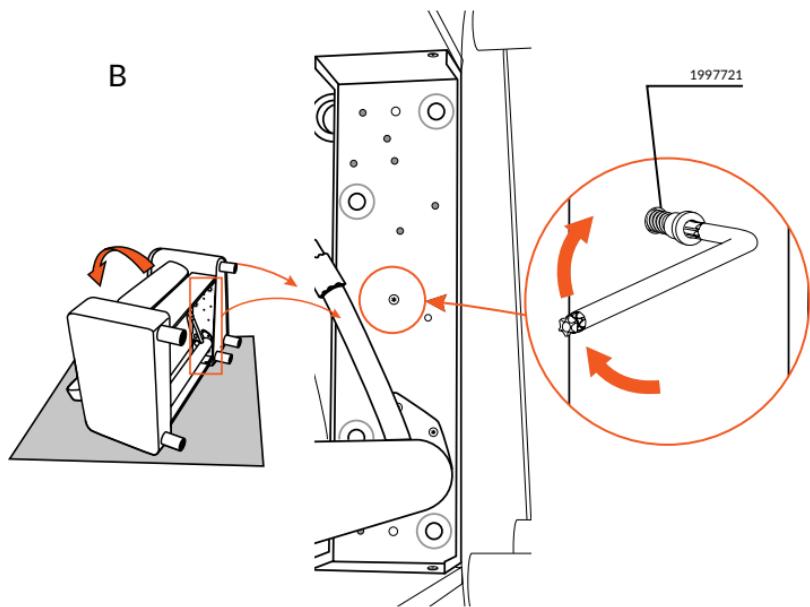


C

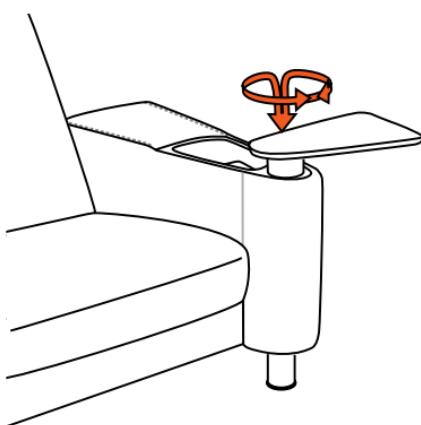


9 DISASSEMBLY - ARMREST


A

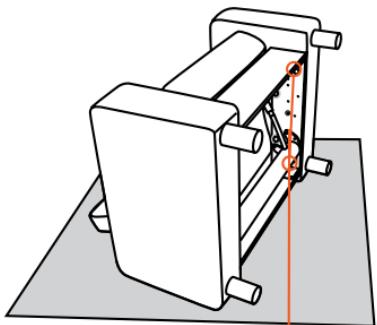


B

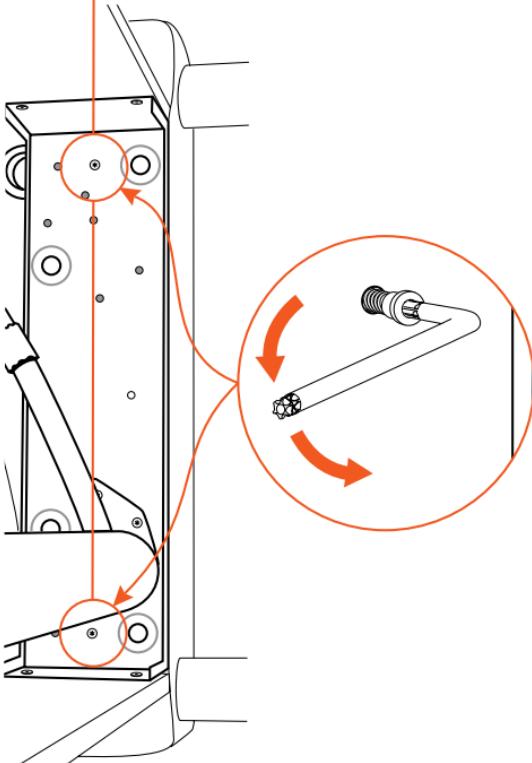

C

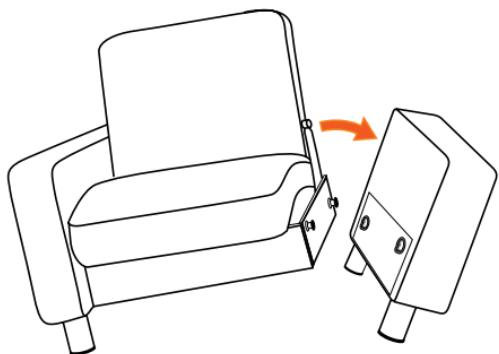

D

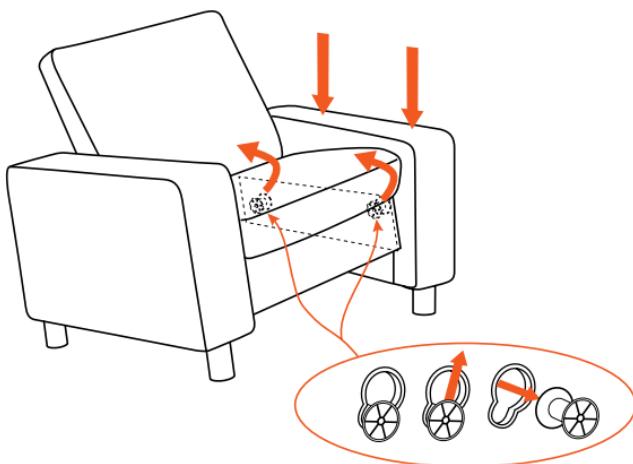



EKORNES®

Ekornes ASA
NO-6222 Ekornes, Norway
Tlf.: +47 70 25 52 00
www.ekornes.com