 



# Assembly Stressless® Dining




D300/D301/D400

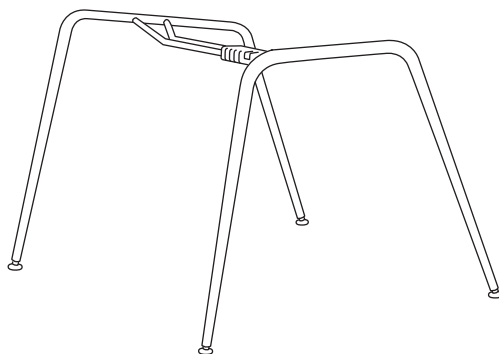

 
D300

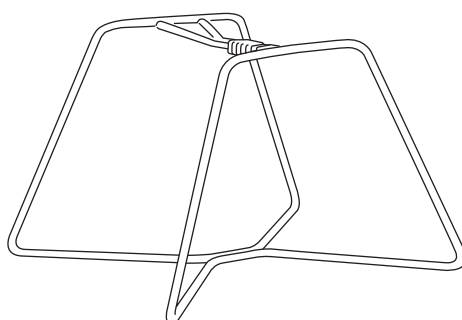

D301

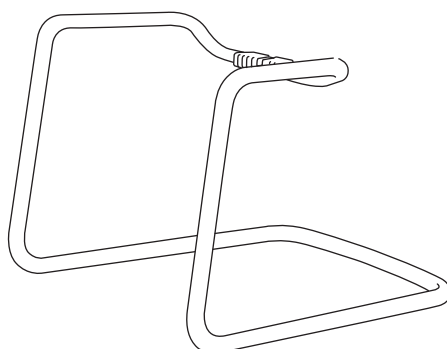 


D400

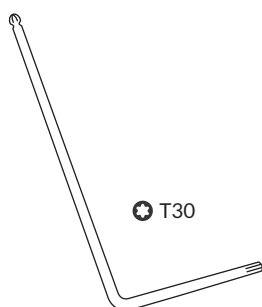 


T30



 
4 x









#990000984


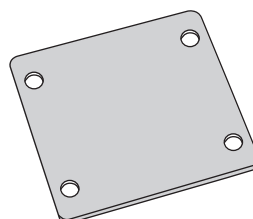 


#75007922

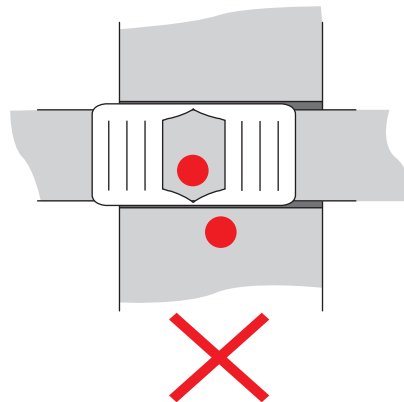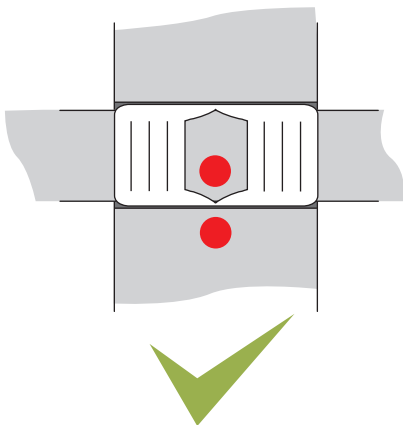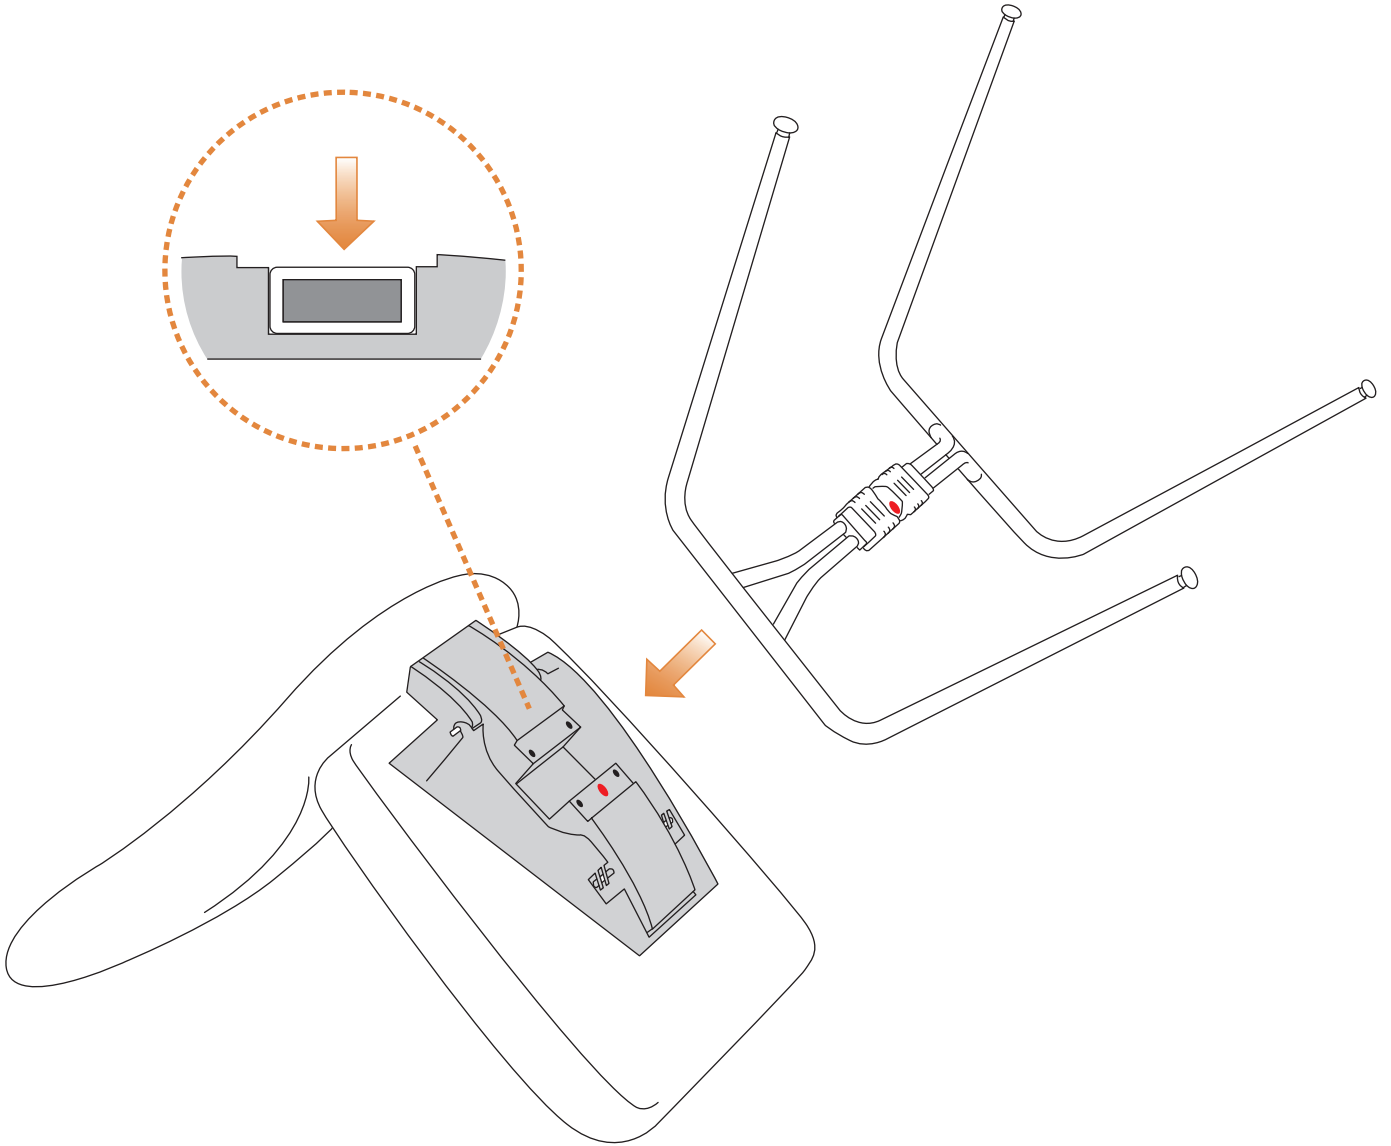   

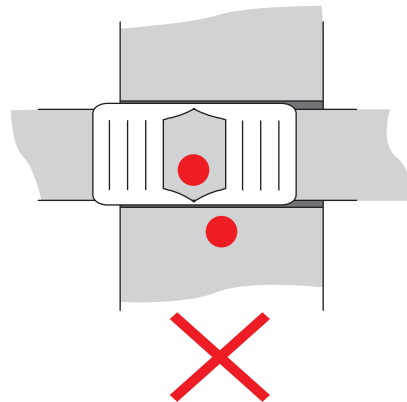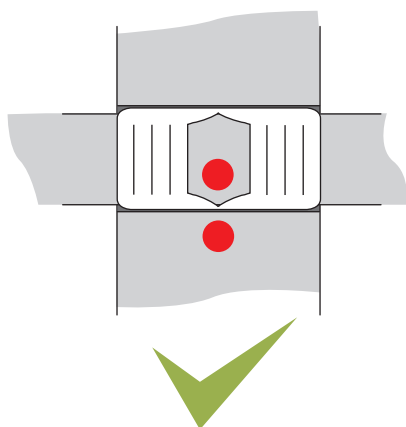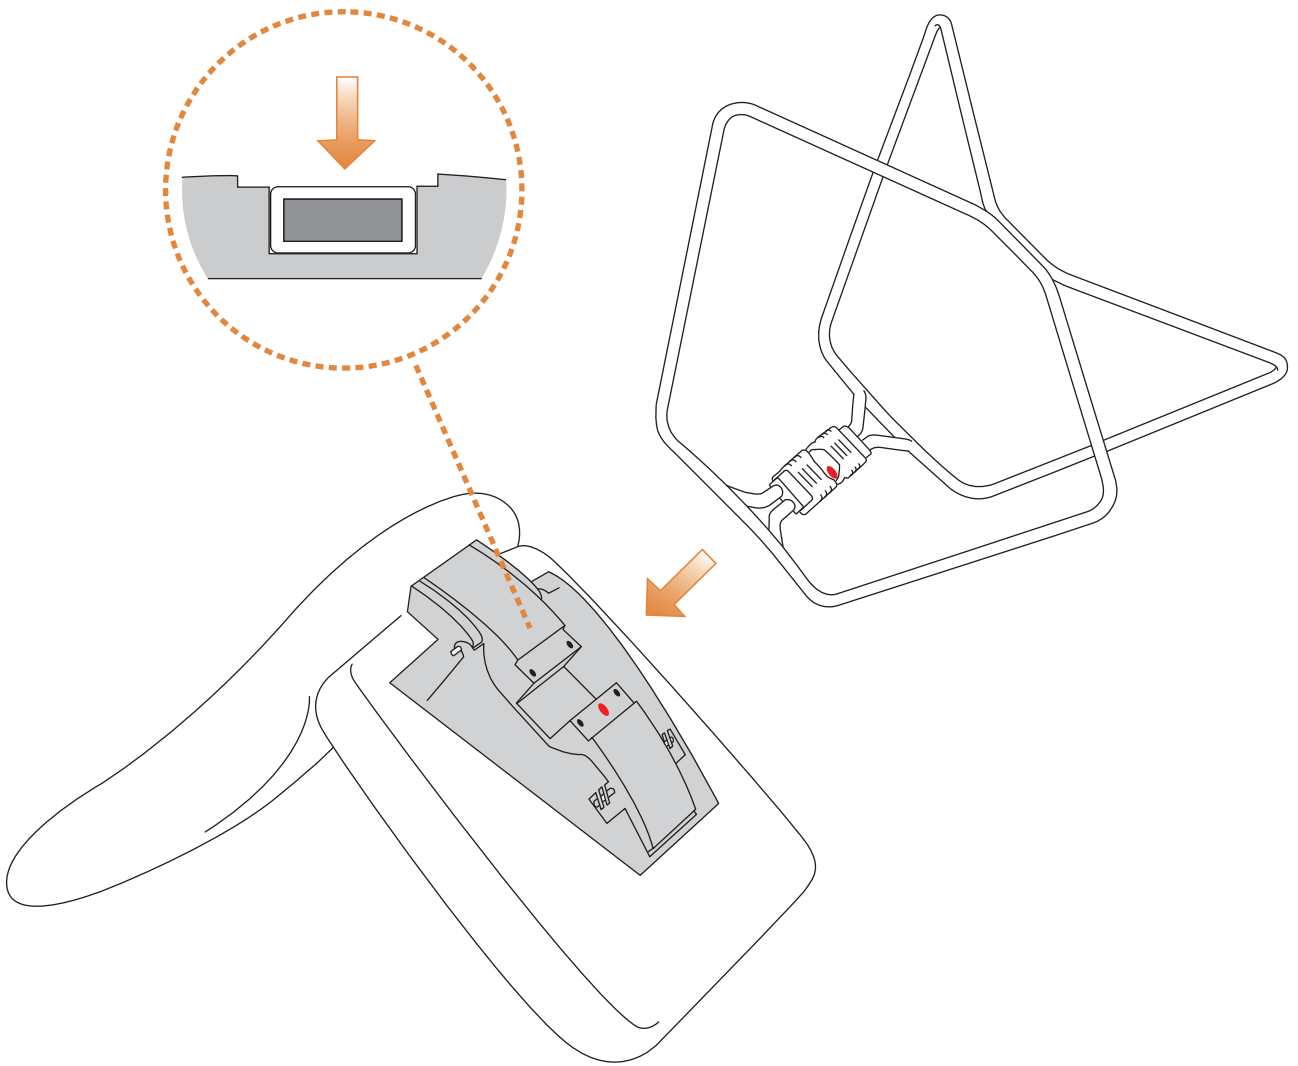   

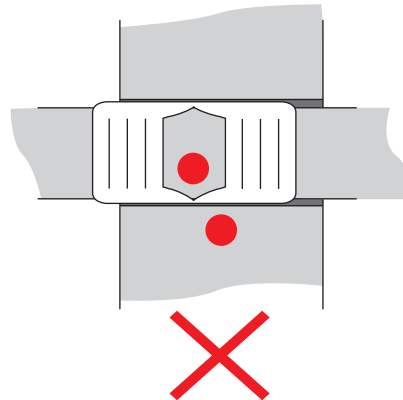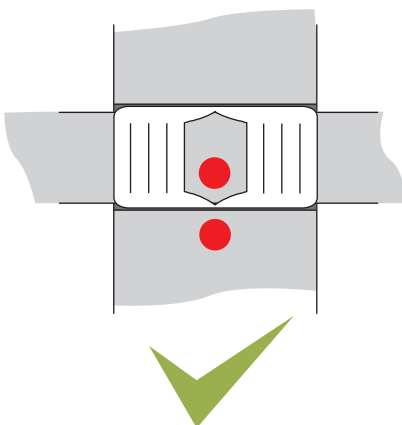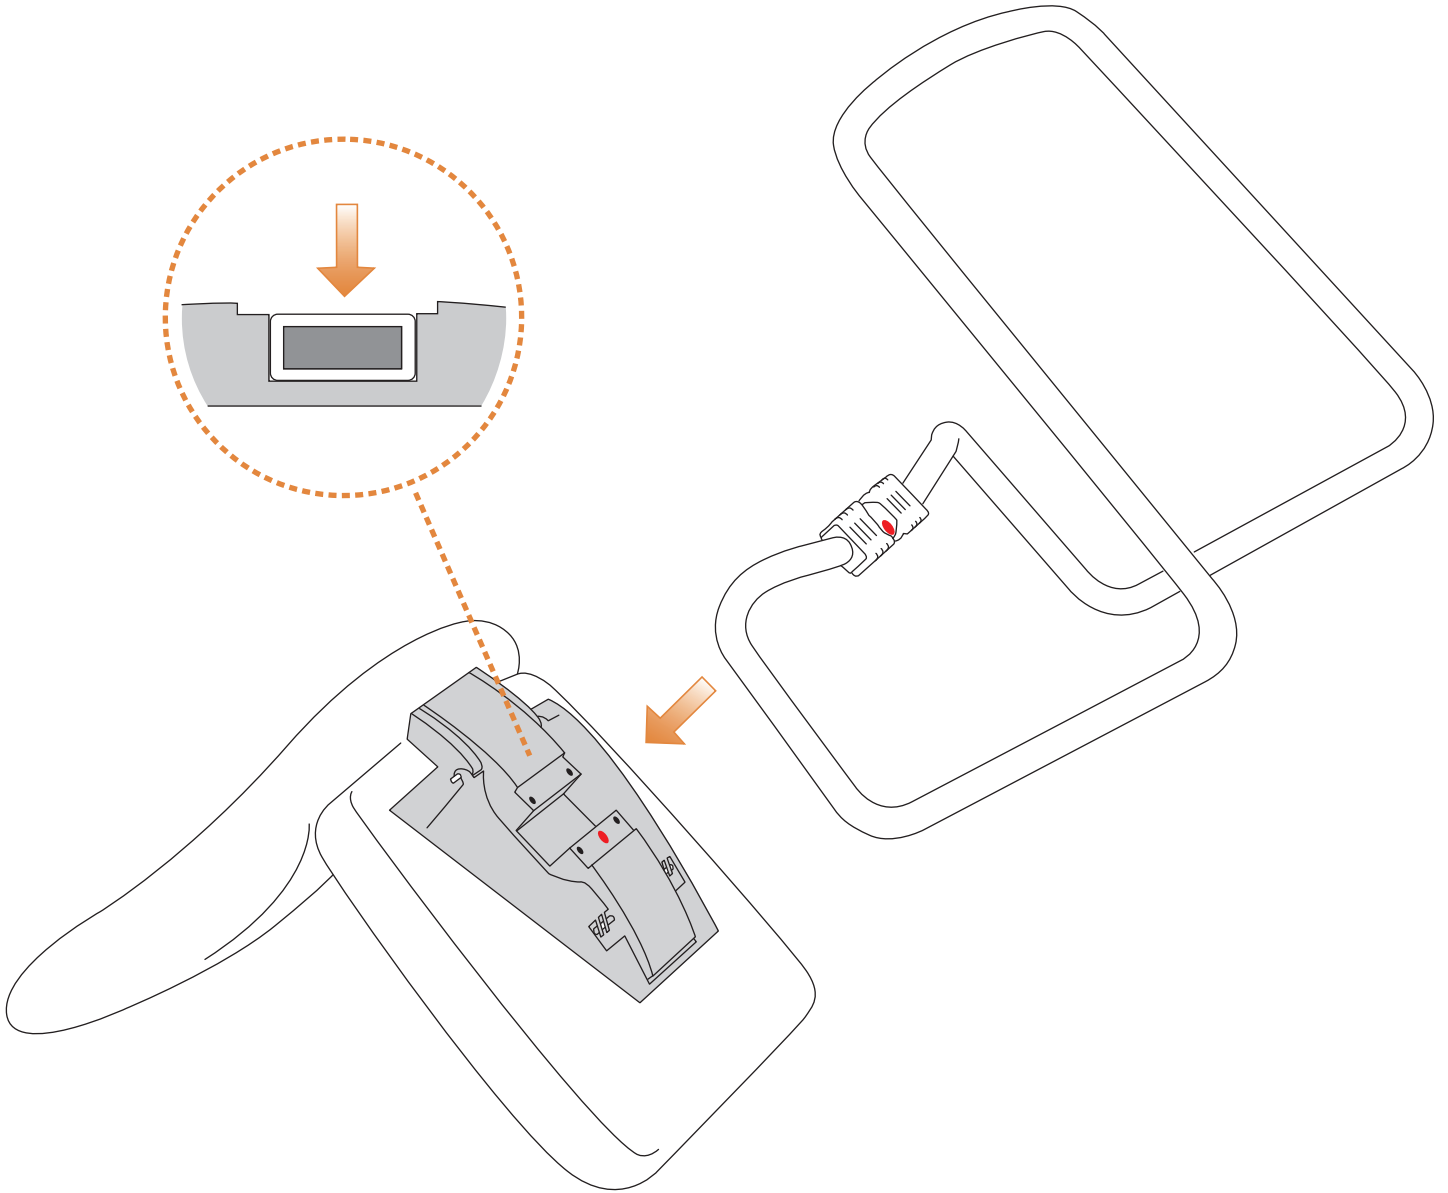   

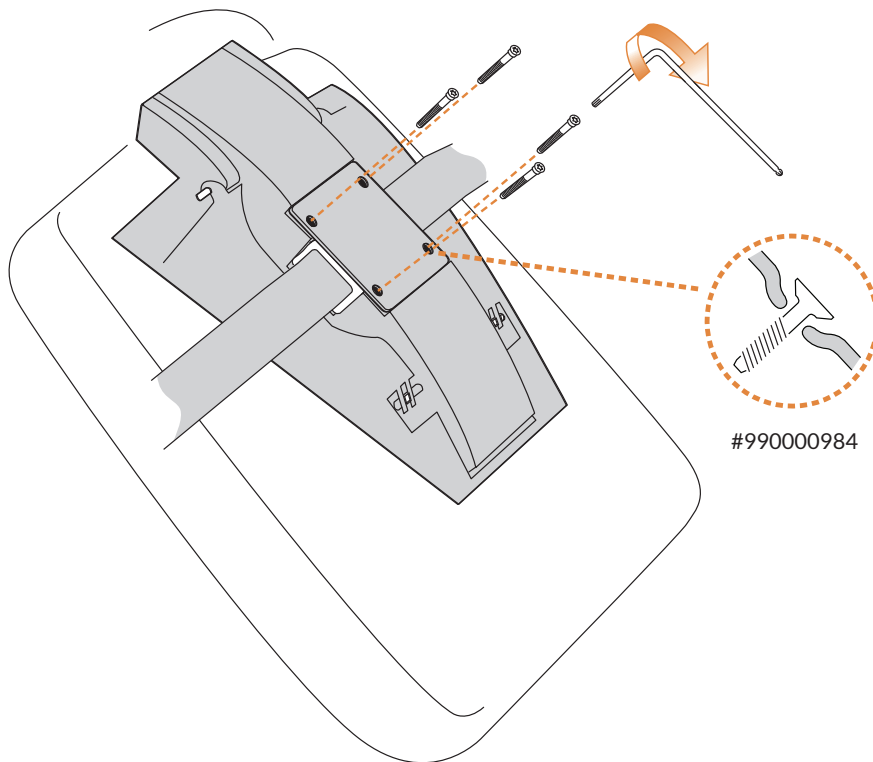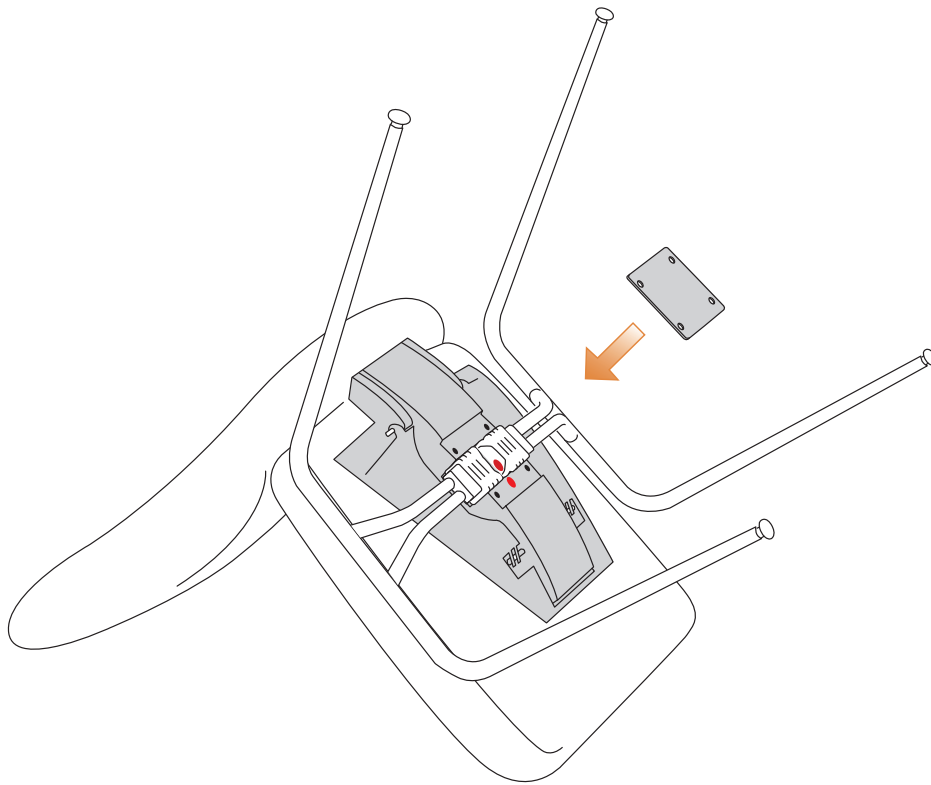  


#990000984




T30 #99230316



 
4 x






#990000984

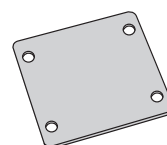 

#75007922

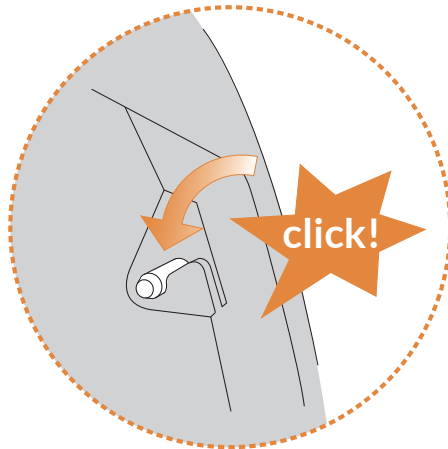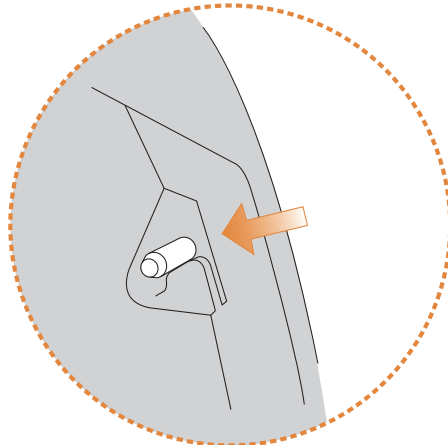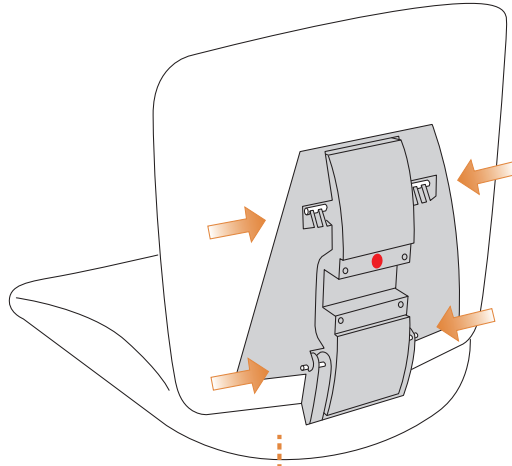   

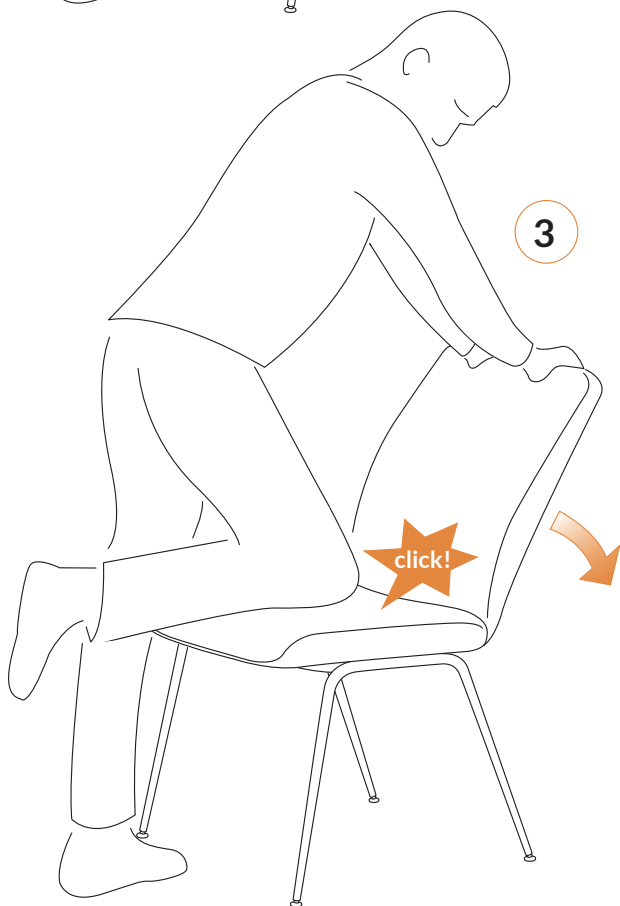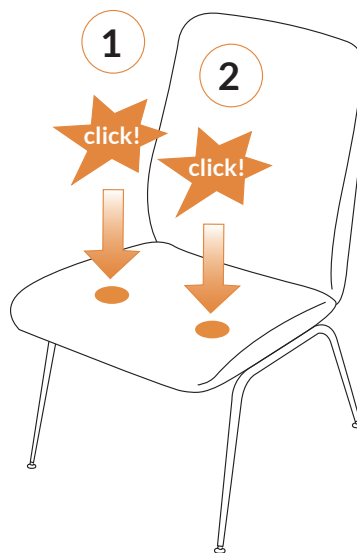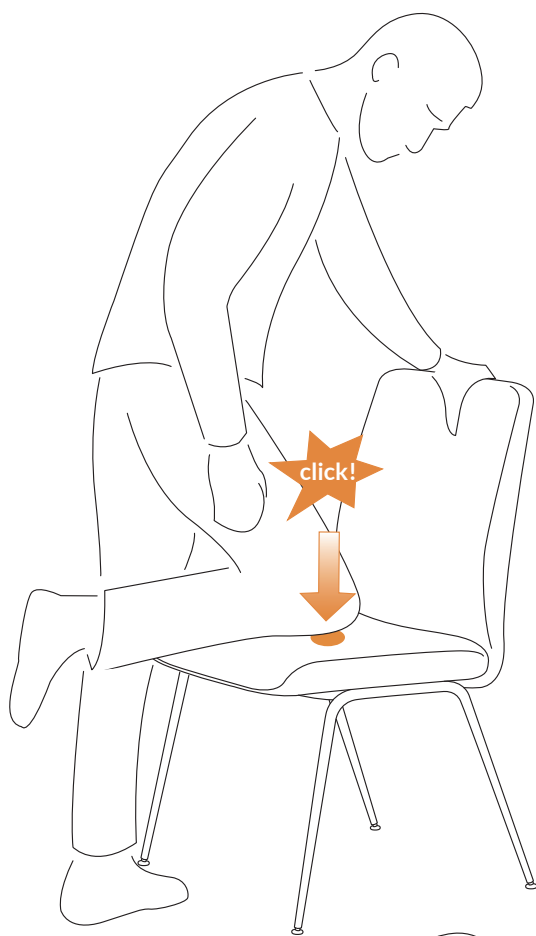   



[www.stressless.com/mystressless](http://www.stressless.com/mystressless)