



Assembly

Stressless® Copenhagen



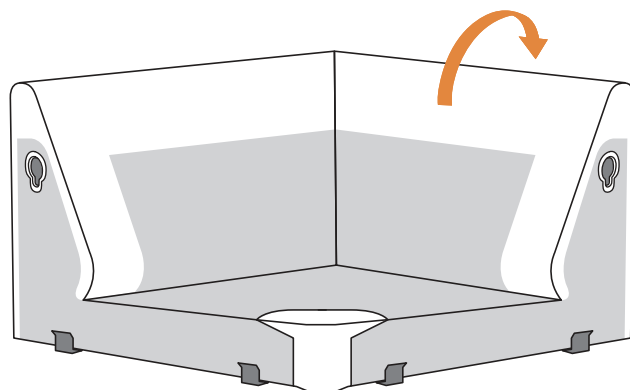


SCAN ME

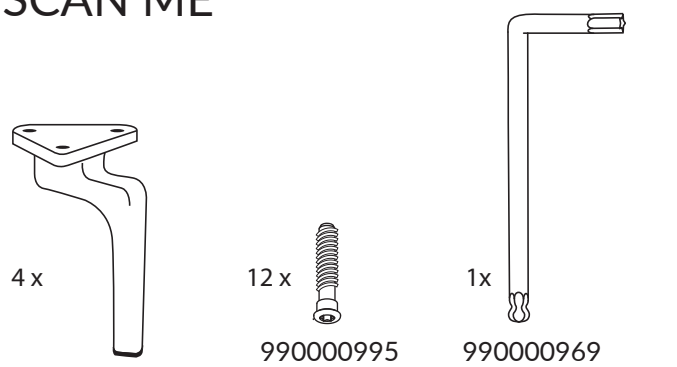


Mounting of corner



1

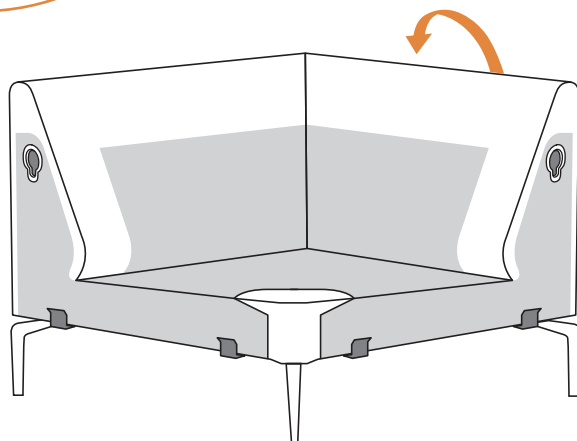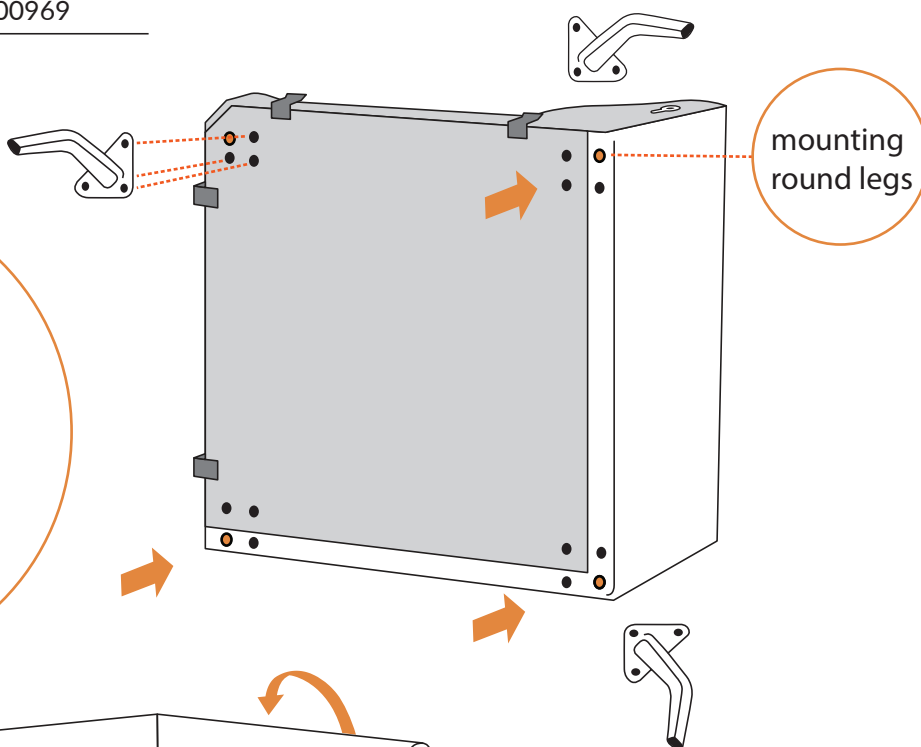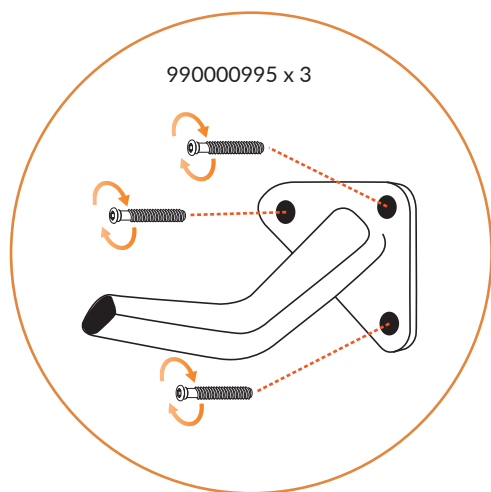


Mounting of legs and arm

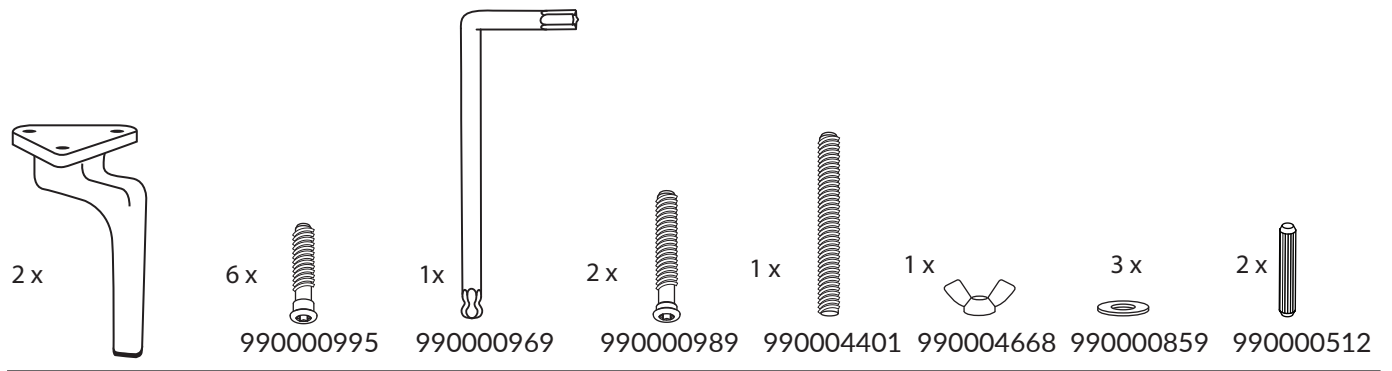

2








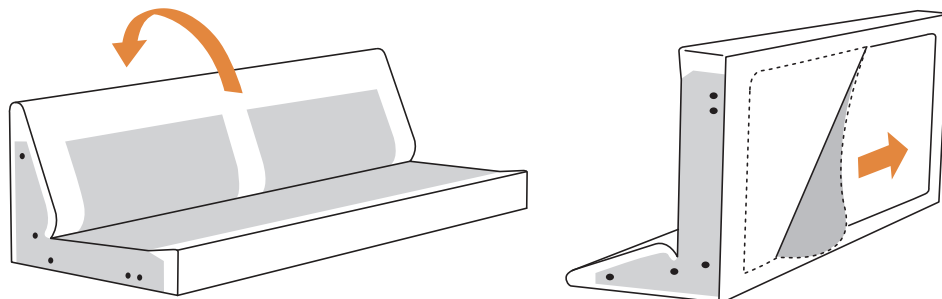
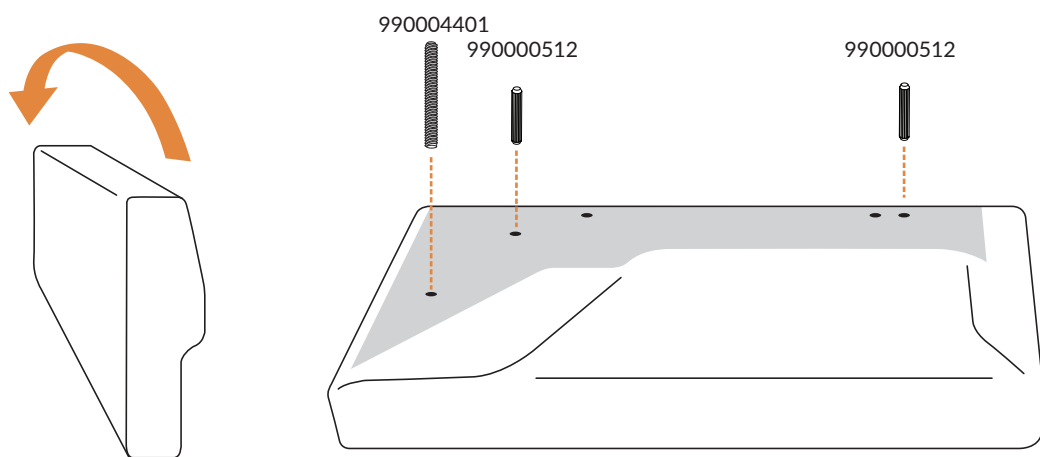


3


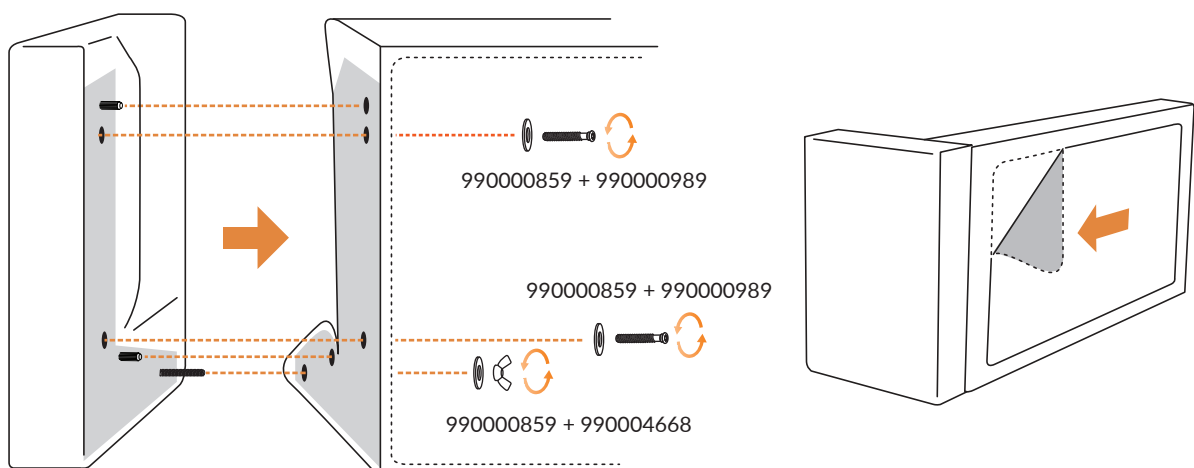


4



Leg placement
Opt.1

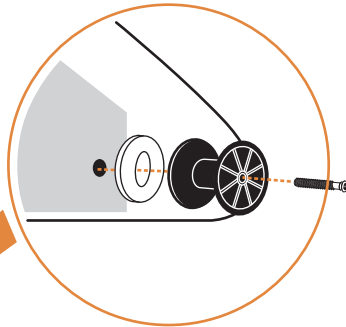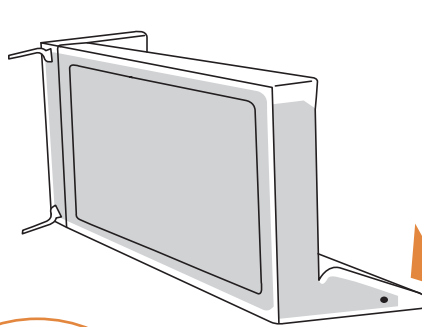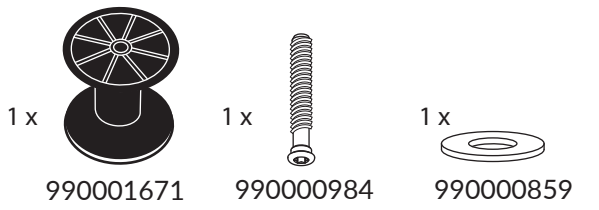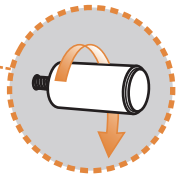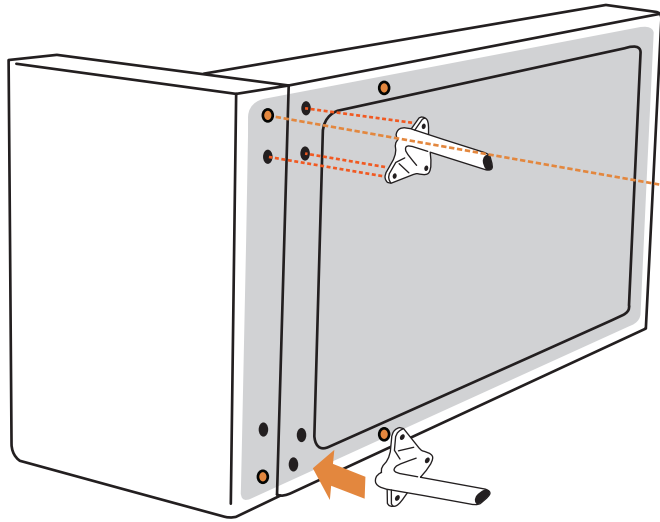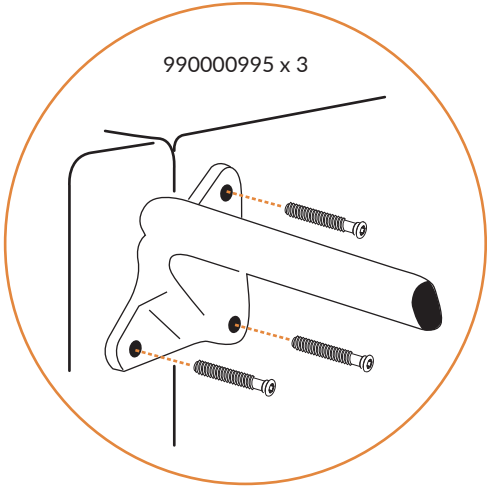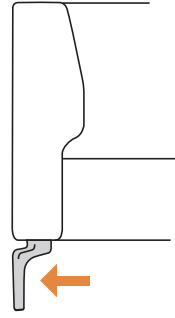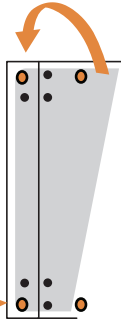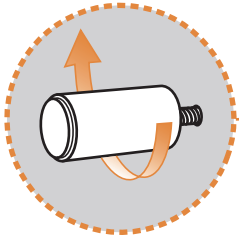


5

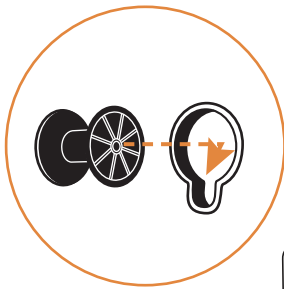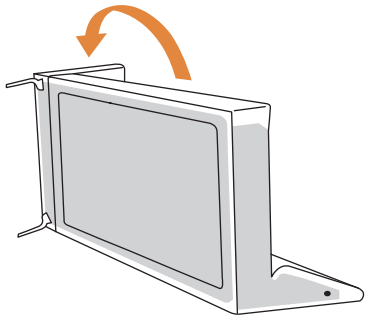


6

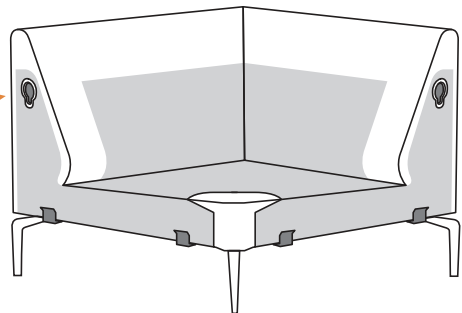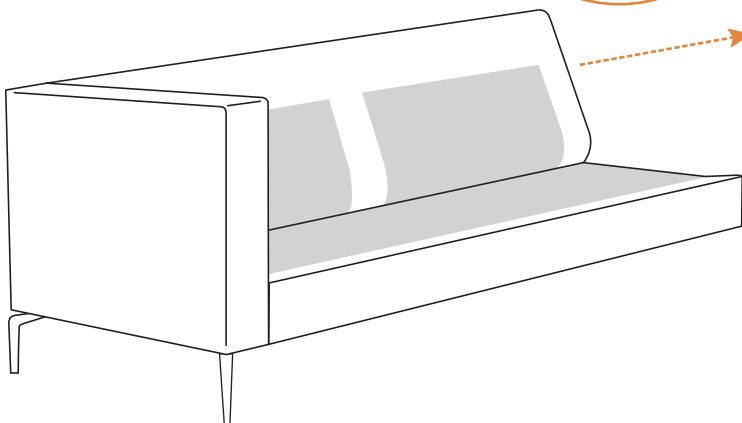


Mounting of legs and arm on longseat

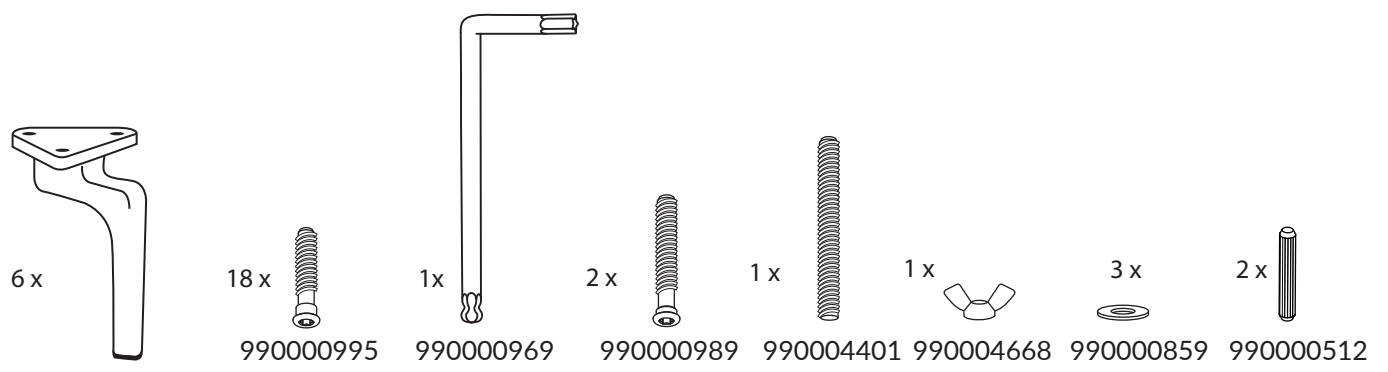






7

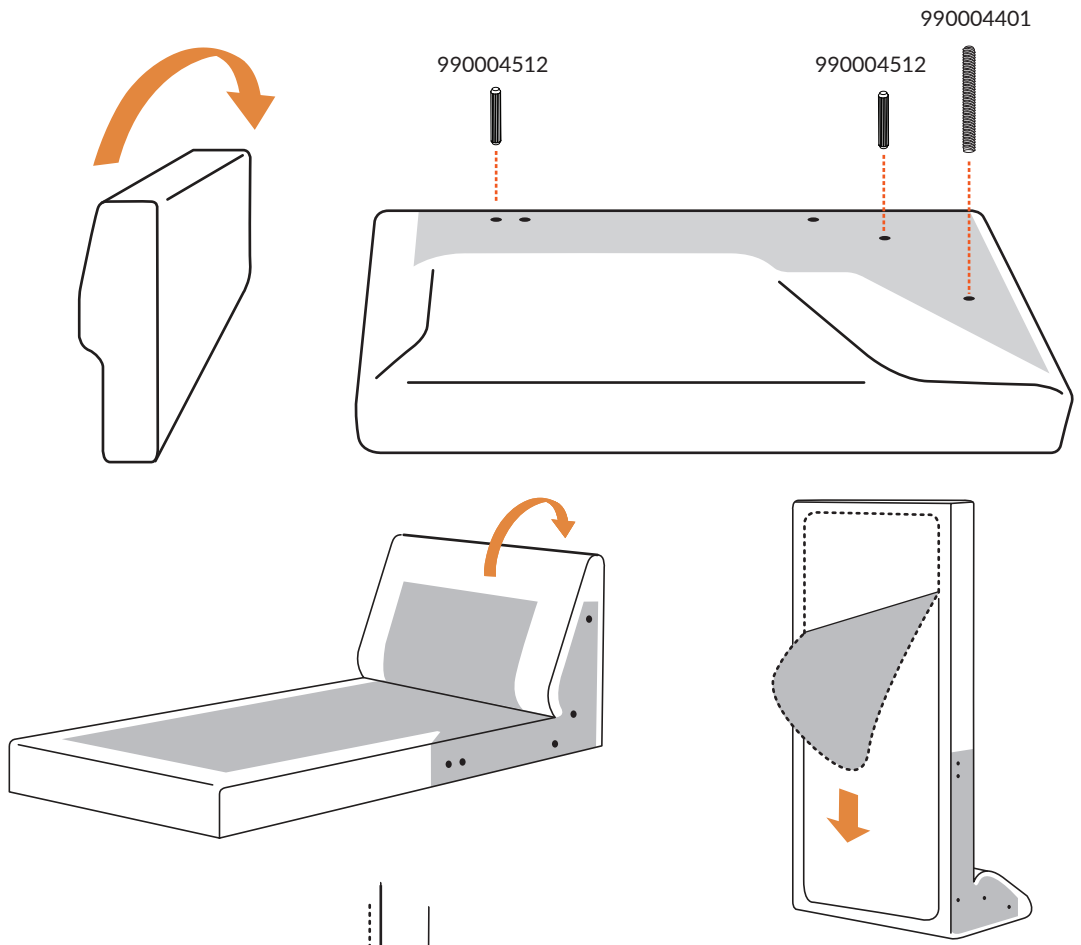



8

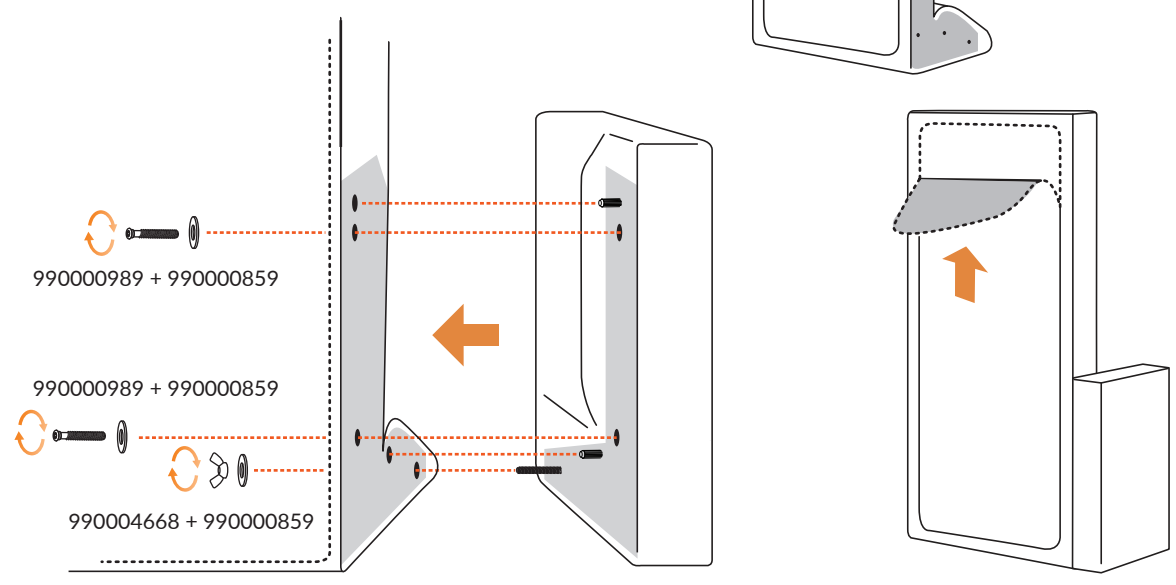




9

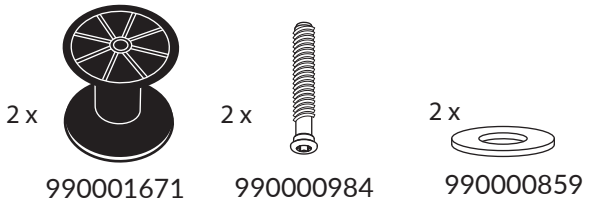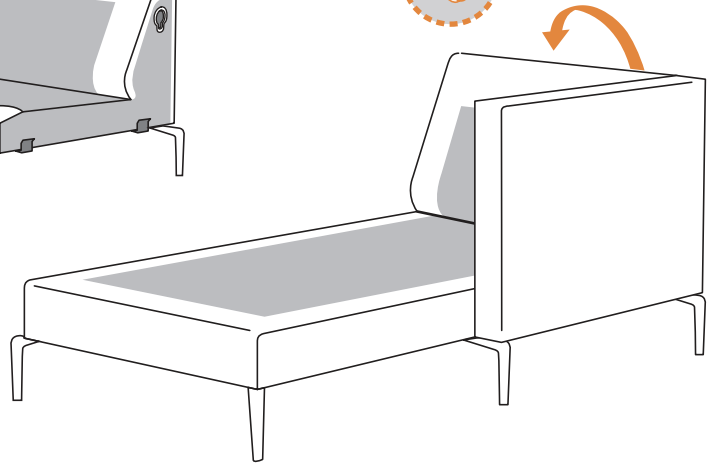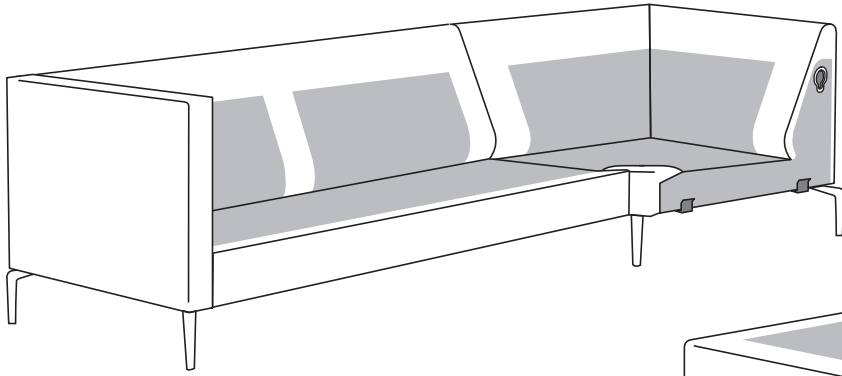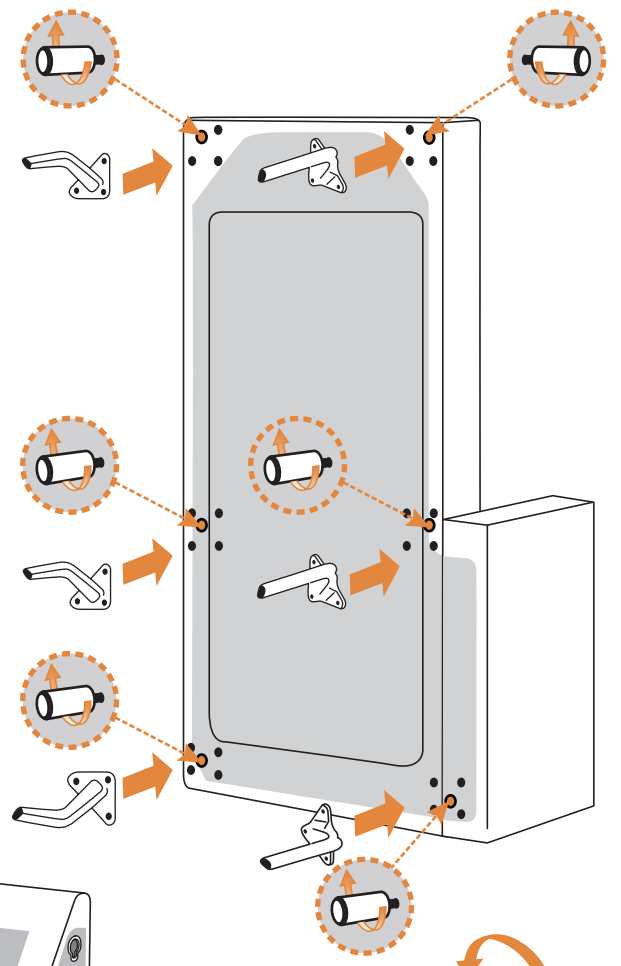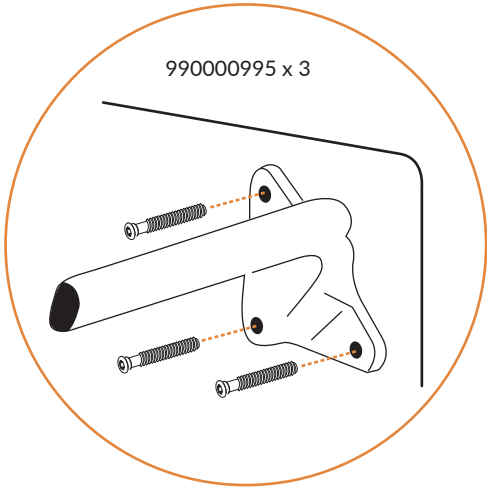

10

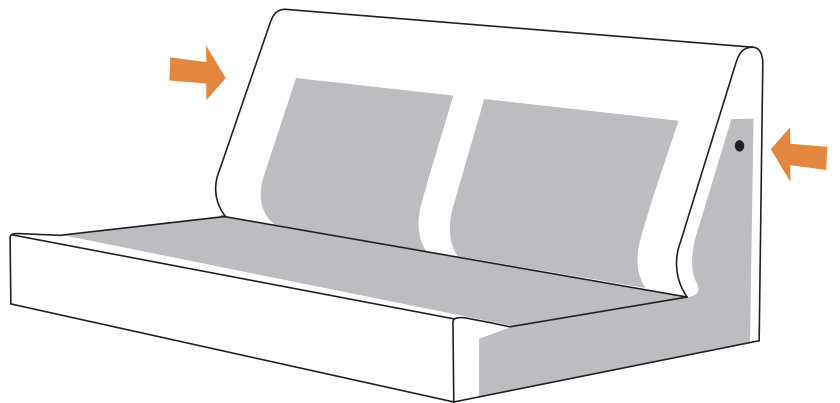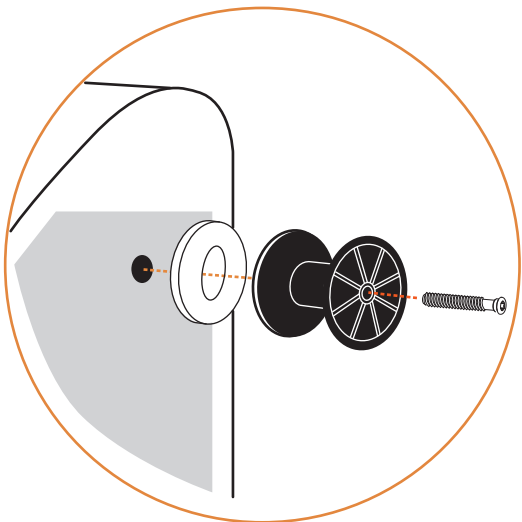

11

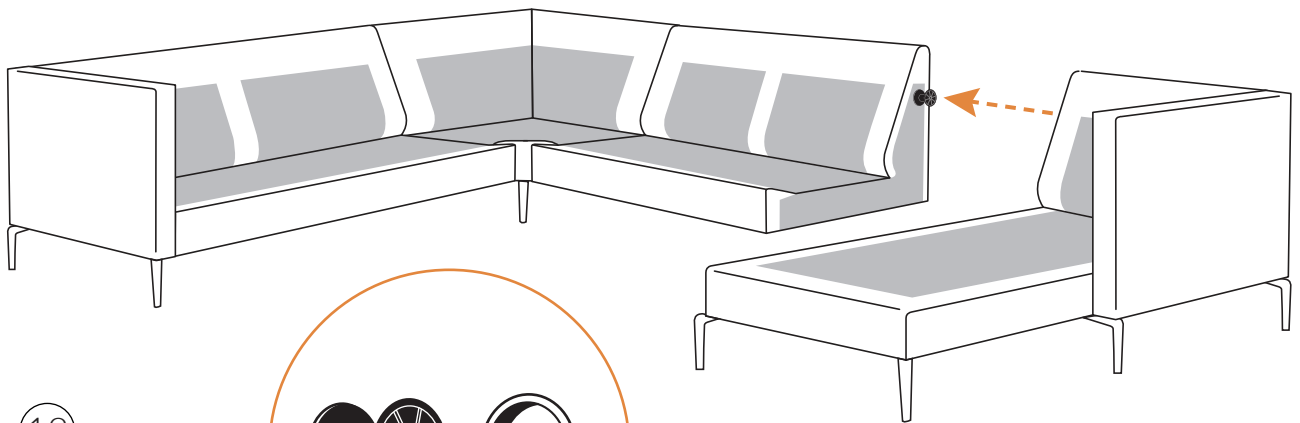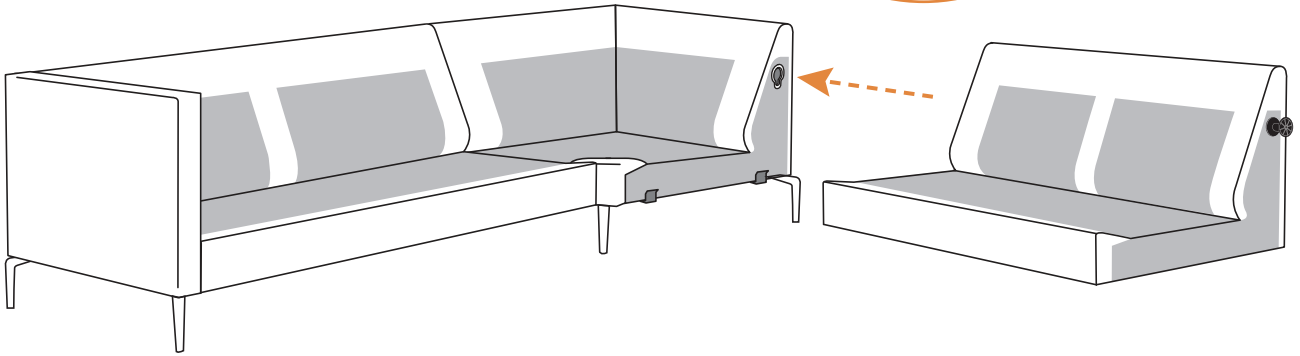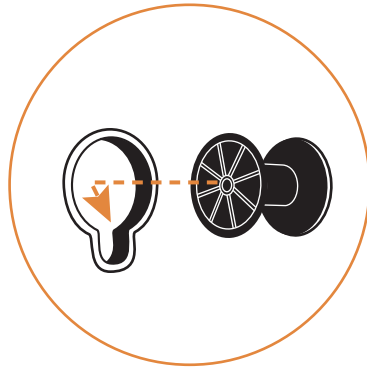

12

